Small Bore Hydraulic Cylinder

CHN Series

CHQ

CHK□

CHN

CHM CHS

CH2□

СНА

Related Products

D-□



Nominal pressure: 7 MPa

Bore size (mm): 20, 25, 32, 40

Stainless Steel Tube

Small Bore Hydraulic Cylinder for 7 MPa


CHN Series

ø20, ø25, ø32, ø40

Equipped with cushion mechanism


- A cushion seal system mechanism is now a standard feature.
- Cushion valves are enhanced with a non-slip retaining mechanism.
- The cushion valve is a discreet type valve that does not protrude from the cover face.

Cushion valve

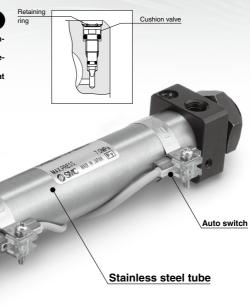

Reduced cross sectional area

 When compared to the same size tie-rod cylinder, the cross sectional area of our CHN series cylinder projects less than 45%, thereby attaining better space savings.



Lightweight

Aluminum cover

Using aluminum alloy for both the rod cover and head cover reduces overall weight.

0.51		
0.01		
0.63		
0.89		
1.51		

Basic type with a 100 mm stroke

Built-in magnet

All cylinders come with a built-in magnet as a standard feature. This makes possible the mounting of an auto switch for piston position sensing even after the cylinder has been installed.

Series Variations

Series	Nominal pressure	Bore size (mm)	Mounting bracket	Auto Switches		
		20				
CHN	7.0 MDo	7.0 MPa	Axial foot type Rod flange type	Band mounting type		
	7.0 MPa	32	Head flange type	Reed type Solid state type		
		40	Single clevis type	Solid State type		

Hydraulic Cylinder CHN Series 7 MPa Ø20, Ø25, Ø32, Ø40

How to Order CHN L 25 - 100 - M9BW Auto switch mounting bracket Note) Note) This symbol is indicated when the D-A9□ or M9□ type auto switch is specified. This mounting bracket does not ap Mounting type ply to other auto switches (D-C7□ В Basic type and H7□, etc.) Axial foot type Applicable to ø20 only. F Rod flange type Number of auto switches Head flange type G Nil 2 pcs Single clevis type s 1 pc "n" pcs. Bore size 20 20 mm Auto switch type 25 25 mm Nil Without auto switch (built-in magnet) 32 32 mm * Select applicable auto switches from the table below 40 40 mm Cylinder stroke (mm)

Applicable Auto Switches/Refer to pages 431 to 490 for further details on each auto switch.

		Electrical	ndicator light	Wiring		Load vol	tage	Auto switch model			Lead	wire le	ength (m)											
Type	Special function	entry	ig g	(output)		DC	AC			0.5	1	3	5	None	Pre-wired connector	Applica	ble load								
		oy	=_	(output)		DC A		Perpendicular	In-line	(Nil)	(M)	(L)	(Z)	(N)	connector										
				3-wire (NPN)		5 V. 12 V		M9NV	M9N	•		•	0	_	0	IC circuit									
		Grommet		3-wire (PNP)		J V, 12 V		M9PV	M9P	•		•	0	_	0	IC CIICUII									
_			1	2-wire		12 V		M9BV	M9B	•	_	•	0	_	0	_									
state auto switch		Connector		Z-WITE		12 V			H7C	•		•	•	•											
S		Terminal		3-wire (NPN)		5 V, 12 V		_	G39	_	_	_	_	•		IC circuit									
육		conduit		2-wire		12 V		_	K39	_	_	_		•		_	Relay								
a a	Diagnostic indication		Diamentis indication	lication	Yes	3-wire (NPN)	24 V	5 V. 12 V	-	M9NWV	M9NW	•	•	•	0	_	0	IC circuit	PLC						
tat	(2-color indicator)				3-wire (PNP)		5 V, 12 V	5 V, 12 V	5 V, 12 V	J V, 12 V		M9PWV	M9PW	•	•	•	0	_	0	IC CIICUIL	- = 0				
g														2-wire		12 V		M9BWV	M9BW	•	•	•	0	_	0
Solid	Water resistant Gromn			3-wire (NPN)		5 V. 12 V		M9NAV*1	M9NA*1	0	0	•	0	_	0	IC circuit									
٠,	(2-color indicator)	or)						3-wire (PNP)		J V, 12 V		M9PAV*1	M9PA*1	0	0	•	0	_	0	io dilcuit					
							2-wire		12 V		M9BAV*1	M9BA*1	0	0	•	0	_	0	_						
	With diagnostic output (2-color indicator)			4-wire (NPN)	/	5 V, 12 V		_	H7NF	•	_	•	0	_	0	IC circuit									
		,	Yes	3-wire (NPN equiv.)	_	5 V	_	A96V	A96	•	_	•	_			IC circuit	_								
								100 V	A93V*2	A93	•	•	•	•	_		_								
ے		Grommet	No				100 V or less	A90V	A90	•	_	•	_	_		IC circuit									
ję			Yes			100 V, 200 V — B5	B54	•	_	•	•				Relay										
S			No				200 V or less	_	B64	•	_	•	_	_		—	PLC								
왘		Connector	Yes	2-wire	24 V	12 V	_	_	C73C	•	_	•	•	•											
a		Connector	No	Z-WITE	24 V		24 V or less	_	C80C	•	_	•	•	•		IC circuit									
Reed auto switch		Terminal					_	_	A33	_	_	_		•			PLC								
		conduit	Yes				100 V,	_	A34			_		•		_	Relay								
		DIN terminal] es				200 V	_	A44					•		_	PLC								
	Diagnostic indication (2-color indicator)	Grommet				_	_	_	B59W	•	_	•	-	_			0								

- *1 Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance. ···(Applicable to ø20 only.) Consult with SMC regarding water resistant types with the above model numbers.
- *2 1 m type lead wire is only applicable to D-A93
- * Lead wire length symbols: 0.5 m Nil (Example) M9NW
 - 1 m ····· M (Example) M9NWM
 - 3 m L (Example) M9NWL
 - 5 m Z (Example) M9NWZ None N (Example) H7CN
- * Solid state auto switches marked "O" are produced upon receipt of order
- * You do not need to specify "N" (i.e., without lead wire) for D-A3, D-A44, D-G39, and D-K39. This is the only standard specification automatically available for these models
 - * D-A9 V, M9 V, M9 WV, and M9 A(V) models cannot be mounted on ø25 to ø40.

Refer to the standard stroke table on page 298.

- * Since there are applicable auto switches other than listed, refer to page 310 for details. * For details about auto switches with pre-wired connector, refer to pages 474 and 475.
- * D-A9□, M9□, and M9□W type auto switches are shipped with the hydraulic cylinder (but not assembled). (However, they are auto switch mounting brackets are shipped with the mounting brackets mounted already).

CHQ

CHK□

CHN CHM

|CHS□

CH2

CHA

Related

Products

D-





Specifications

Bore size (mm)	20	25	32	40		
Action	Double acting/Single rod					
Fluid	Hydraulic fluid					
Nominal pressure		7 N	/IPa			
Proof pressure	10.5 MPa					
Maximum allowable pressure	9 MPa					
Minimum operating pressure	0.3 MPa					
Ambient and fluid temperature	Without auto switch: -10° to 80°C					
Ambient and huld temperature	With auto switch: -10° to 60°C					
Piston speed	8 to 300 mm/s					
Cushion		Cushio	on seal			
0		to 250 mm	+1.0			
Stroke length tolerance	251 to 800 mm ^{+1.4}					
		Basic type, A	xial foot type			
Mounting type	Head flange type, Rod flange type					
	Single clevis type					

Note) Refer to page 214 for definitions of terms related to pressure.

Accessories

	Mounting type	Basic	Axial foot	Head flange	Rod flange	Single clevis
Standard	Mounting nut	(2 pcs.)	(2 pcs.)	(1 pc.)	(1 pc.)	_
Sta	Rod end nut	•	•	•	•	•

Option

Knuckle pin Bracket oin	''' ''	Refer to page 307
--------------------------	--------	-------------------

Hydraulic Fluid Compatibility

Hydraulic fluid	Compatibility
Standard mineral hydraulic fluid	Compatible
W/O hydraulic fluids	Compatible
O/W hydraulic fluids	Compatible
Water/Glycol hydraulic fluids	*
Phosphate hydraulic fluids	Not compatible

^{*} Consult with SMC.

$\textbf{Standard Strokes:} \ \ \textit{Refer to page 309 for minimum strokes for auto switch mounting}.$

Bore size (mm)	Standard strokes (mm)	Long stroke
20	25 to 300	
25	25 to 400	800
32	25 to 500	800
40	25 10 500	

^{*} Standard strokes above have a minimal delivery time.

Consult with SMC for the manufacture of strokes other than the above.

Mounting Brackets: Part Nos.

Bore size (mm)	20	25	32	40
Axial foot *	CHN-L020	CHN-L025	CHN-L032	CHN-L040
Flange	CHN-F020	CHN-F025	CHN-F032	CHN-F040

^{*} When ordering the axial foot type, order 2 pieces for each cylinder.



Theoretical Output

							Unit: N
Bore size	Rod size	Operating	Piston area	0	perating pre	essure (MPa	a)
(mm)	(mm)	direction	(mm ²)	1	3	5	7
20	40	OUT	314	314	942	1570	2198
20	10	IN	235	235	705	1175	1645
25	12	OUT	490	490	1470	2450	3430
25		IN	377	377	1131	1885	2639
32	16	OUT	804	804	2412	4020	5628
32	16	IN	603	603	1809	3015	4221
40	10	OUT	1256	1256	3768	6280	8792
40	18	IN	1002	1002	3006	5010	7014

Theoretical output (N) = Pressure (MPa) x Piston area (mm²)

Weight

					Unit: kg
	Bore size (mm)	20	25	32	40
Basic Weight	Basic type	0.27	0.37	0.53	1.05
	Axial foot type	0.51	0.63	0.91	1.59
	Flange type	0.36	0.54	0.72	1.26
	Clevis type	0.25	0.45	0.67	1.00
Additional weight per 50 mm		0.12	0.13	0.18	0.23

Calculation method
 (Example) CHNL20-100
 (Foot type, ø20, 100 mm stroke)
 Basic weight 0.12/50 mm
 Cylinder stroke 100 mm
 0.51 + 0.12/50 x 100 = 0.75 kg

⚠ Specific Product Precautions

Be sure to read this before handling the products.

Refer to back page 50 for Safety Instructions and pages 214 to 221 for Hydraulic Cylinder and Auto Switch Precautions.

⚠ Caution

When operating a cylinder for the first time, make sure to release the air at low pressure. When the air release is complete, operate the cylinder at reduced pressure, gradually increasing it to the normal operating pressure. However, the piston speed at this time should be adjusted to the minimum speed.

Mounting

 When mounting with bracket mounting nuts, tighten them using the tightening torques in the table below as a quide.

	•		
Bore size (mm)	Mounting nut thread	Mounting nut width across flats (mm)	Tightening torque (N·m)
20	M22 x 1.5	26	45
25	M24 x 1.5	32	60
32	M30 x 1.5	38	85
40	M33 x 1.5	41	110

2. When mounted with one side attached and one side unattached (basic type and flange type) and operating at high speed, bending moment acts on the cylinder due to oscillation at the stroke end, which may cause cylinder damage. In this case, install brackets to suppress the oscillation of the cylinder body, or reduce the piston speed enough so that the cylinder body does not oscillate at the stroke end.

CHQ

CHK□

CHN

CHM

CHS□ CH2□


CHA

Related Products





Construction

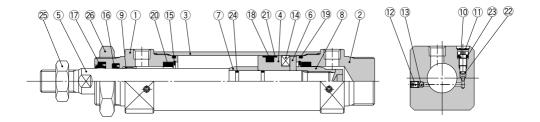

Parts List

No.	Description	Material	Note
1	Rod cover	Aluminum alloy	Black anodized
2	Head cover	Aluminum alloy	Black anodized
3	Cylinder tube	Stainless steel	
4	Piston	Stainless steel	
5	B	ø20, 25: Stainless steel	Hard chromium
э	Piston rod	ø32, 40: Carbon steel	electro plating
6	Magnet plate	Stainless steel	
7	Cushion ring A	Carbon steel	
8	Cushion ring B	Carbon steel	
9	Bushing	Lead bronze	
10	Cushion valve	Carbon steel	
11	Retaining ring	Spring steel	
12	Air release valve	Alloy steel	
13	Check ball	Bearing steel	

Replacement Parts: Seal Kit


Seal kit no.	Content
CHN20-PS	
CHN25-PS	Nos. 16 to 23
CHN32-PS	from the chart
CHN40-PS	
	CHN20-PS CHN25-PS CHN32-PS

Parts List

No.	Description	Material	Note
14	Magnet	_	
15	Retaining ring	Spring steel	
16	Rod seal	NBR	
17	Scraper	NBR	
18	Piston seal	NBR	
19	Tube gasket	NBR	
20	Cushion seal	_	
21	Back-up ring	Resin	
22	Cushion valve seal A	NBR	
23	Cushion valve seal B	NBR	
24	Piston gasket	NBR	
25	Rod end nut	Carbon steel	
26	Mounting nut	Carbon steel	

Dimensions

Basic type: CHNB

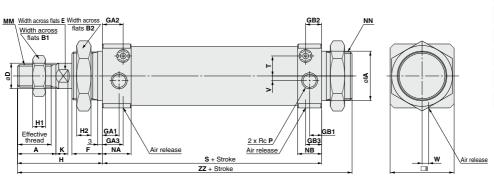

																		(mm)
Bore size (mm)	Stroke range (mm)	Effective thread length (mm)	A	B1	B2	D	E	F	GA1	GA2	GA3	GB1	GB2	GB3	Н	H1	H2	ı
20	25 to 300	15.5	18	13	26	10	8	16	10	12	12	8	10	10	41	5	8	31
25	25 to 400	19.5	22	17	32	12	10	16	10	12	12	8	10	10	46	6	8	34
32	25 to 500	21	24	22	38	16	14	19	11	13	13	8	10	10	53	8	9	40
40	25 to 500	21	24	24	41	18	16	21	12	17	17	11	16	16	54	10	11	48

													(mm)
	e size nm)	IA	к	ММ	NA	NB	NN	Р	s	т	v	w	zz
2	20	23f8-0.020 -0.053	5	M8 x 1.25	17	15	M22 x 1.5	1/8	81	9.8	4.5	6.5	138
2	25	25f8 ^{-0.020} _{-0.053}	5.5	M10 x 1.25	17	15	M24 x 1.5	1/8	81	11	3.5	5.5	143
3	32	31f8 ^{-0.025} _{-0.064}	7.5	M14 x 1.5	18	15	M30 x 1.5	1/8	87	13	3	4	159
4	10	34f8-0.025	7.5	M16 x 1.5	22	21	M33 x 2	1/4	108	16	5	0	183

SMC

CHQ CHK□

CHN CHM

CHS

CH2□


CHA

Related Products

D-□

Dimensions


Axial foot type: CHNL

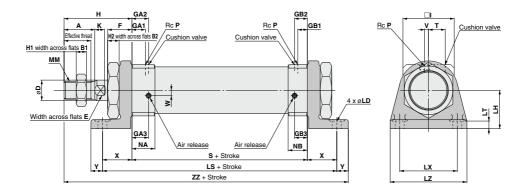

																			(mm)
Bore size (mm)	Stroke range (mm)	Effective thread length (mm)	A	B1	B2	D	Е	F	GA1	GA2	GA3	GB1	GB2	GB3	н	H1	H2	I	к
20	25 to 300	15.5	18	13	26	10	8	16	10	12	12	8	10	10	41	5	8	31	5
25	25 to 400	19.5	22	17	32	12	10	16	10	12	12	8	10	10	46	6	8	34	5.5
32	25 to 500	21	24	22	38	16	14	19	11	13	13	8	10	10	53	8	9	40	7.5
40	25 to 500	21	24	24	41	18	16	21	12	17	17	11	16	16	54	10	11	48	7.5

																	(mm)
Bore size (mm)	LD	LH	LS	LT	LX	LZ	ММ	NA	NB	Р	s	т	V	w	х	Y	ZZ
20	7	25	121	5.5	40	55	M8 x 1.25	17	15	1/8	81	9.8	4.5	6.5	20	9	151
25	7	28	121	5.5	40	55	M10 x 1.25	17	15	1/8	81	11	3.5	5.5	20	9	156
32	7	30	133	6	45	60	M14 x 1.5	18	15	1/8	87	13	3	4	23	9	172
40	9	35	158	6	55	75	M16 x 1.5	22	21	1/4	108	16	5	0	25	11	198

Rod flange type: CHNF

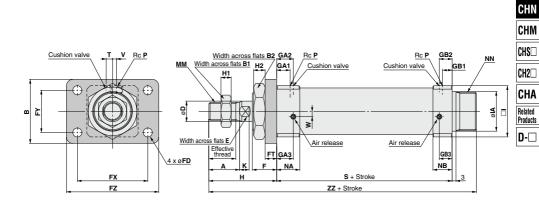


																			(mm)
Bore size (mm)	Stroke range (mm)	Effective thread length (mm)	А	В	В1	B2	D	E	F	FD	FT	FX	FY	FZ	GA1	GA2	GA3	GB1	GB2
20	25 to 300	15.5	18	38	13	26	10	8	16	7	6	51	21	68	10	12	12	8	10
25	25 to 400	19.5	22	44	17	32	12	10	16	7	9	53	27	70	10	12	12	8	10
32	25 to 500	21	24	50	22	38	16	14	19	7	9	55	33	72	11	13	13	8	10
40	25 to 500	21	24	60	24	41	18	16	21	9	9	66	36	84	12	17	17	11	16

																	(mm)
Bore size (mm)	GB3	Н	H1	H2	I	IA	К	ММ	NA	NB	NN	Р	s	т	v	w	zz
20	10	41	5	8	31	23f8 -0.020 -0.053	5	M8 x 1.25	17	15	M22 x 1.5	1/8	81	9.8	4.5	6.5	138
25	10	46	6	8	34	25f8 -0.020 -0.053	5.5	M10 x 1.25	17	15	M24 x 1.5	1/8	81	11	3.5	5.5	143
32	10	53	8	9	40	31f8 -0.025 -0.064	7.5	M14 x 1.5	18	15	M30 x 1.5	1/8	87	13	3	4	159
40	16	54	10	11	48	34f8 -0.025 -0.064	7.5	M16 x 1.5	22	21	M33 x 2	1/4	108	16	5	0	183

CHQ CHK

Dimensions


Head flange type: CHNG

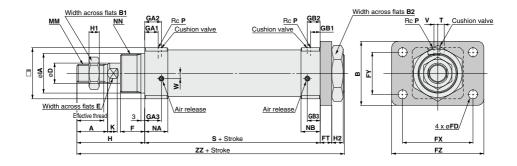

																			(mm)
Bore size (mm)	Stroke range (mm)	Effective thread length (mm)	A	В	В1	B2	D	E	F	FD	FT	FX	FY	FZ	GA1	GA2	GA3	GB1	GB2
20	25 to 300	15.5	18	38	13	26	10	8	16	7	6	51	21	68	10	12	12	8	10
25	25 to 400	19.5	22	44	17	32	12	10	16	7	9	53	27	70	10	12	12	8	10
32	25 to 500	21	24	50	22	38	16	14	19	7	9	55	33	72	11	13	13	8	10
40	25 to 500	21	24	60	24	41	18	16	21	9	9	66	36	84	12	17	17	11	16

																	(mm)
Bore size (mm)	GB3	н	Н1	H2	1	IA	к	ММ	NA	NB	NN	Р	s	т	v	w	ZZ
20	10	41	5	8	31	23f8 -0.020 -0.053	5	M8 x 1.25	17	15	M22 x 1.5	1/8	81	9.8	4.5	6.5	138
25	10	46	6	8	34	25f8 ^{-0.020} _{-0.053}	5.5	M10 x 1.25	17	15	M24 x 1.5	1/8	81	11	3.5	5.5	143
32	10	53	8	9	40	31f8 -0.025 -0.064	7.5	M14 x 1.5	18	15	M30 x 1.5	1/8	87	13	3	4	159
40	16	54	10	11	48	34f8 -0.025 -0.064	7.5	M16 x 1.5	22	21	M33 x 2	1/4	108	16	5	0	183

Single clevis type: CHNC

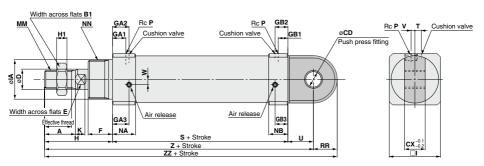

(mm) Bore size Stroke range Effective thread В1 CD СХ D Е GA1 GA2 GA3 GB1 GB2 GB3 н Н1 (mm) (mm) length (mm) 10 +0.109 25 to 300 15.5 10 ^{+0.109}
12 ^{+0.109}
0 19.5 25 to 400 25 to 500 16 ^{+0.034}_{-0.015} 25 to 500

															(mm)
Bore size (mm)	IA	к	ММ	NA	NB	NN	Р	RR	s	т	U	v	w	z	zz
20	23f8 -0.020 -0.053	5	M8 x 1.25	17	15	M22 x 1.5	1/8	13.5	81	9.8	14	4.5	6.5	136	149.5
25	25f8 -0.020 -0.053	5.5	M10 x 1.25	17	15	M24 x 1.5	1/8	14.5	81	11	15	3.5	5.5	142	156.5
32	31f8 -0.025 -0.064	7.5	M14 x 1.5	18	15	M30 x 1.5	1/8	18.5	87	13	20	3	4	160	178.5
40	34f8 -0.025 -0.064	7.5	M16 x 1.5	22	21	M33 x 2	1/4	22.5	108	16	20	5	0	182	204.5

SMC

CHQ

CHK□

CHM

CHS□

CH2□

 
CHA

 
Related Products

D-□

Accessories (Standard)

Rod end nut






Material: Carbon steel

Part no.	Applicable bore size (mm)	d	н	В	С	D
NT-02	20	M8 x 1.25	5	13	15.0	12.5
NT-03	25	M10 x 1.25	6	17	19.6	16.5
NT-04	32	M14 x 1.5	8	22	25.4	21.0
AC-NI-50	40	M16 x 1.5	10	24	27.7	23

 Mounting nut






Material: Carbon steel

Part no.	Applicable bore size (mm)	d	н	В	С	D
SO-02	20	M22 x 1.5	8	26	30	26
SO-03	25	M24 x 1.5	8	32	36.9	32
SO-04	32	M30 x 1.5	9	38	43.9	38
SO-05	40	M33 x 2.0	11	41	47.3	41

Accessory Brackets (Optional)

 I-type single knuckle joint




Material: Rolled steel plate

Material: Rolled steel plate

Part no.	Applicable bore size (mm)	A 1	E1	Lı	ММ	Rı	U ₁	ND ^{H10}	NX
I-020B	20	16	20	36	M8 x 1.25	10	14	9 +0.058	9-0.1
I-032B	25	18	20	38	M10 x 1.25	10	14	9 *0.058	9-0.1
I-04A	32	22	24	55	M14 x 1.5	15.5	20	12 +0.070	16-0.1
IHN-04A	40	22	24	55	M16 x 1.5	15.5	20	15 +0.070	16-0.1

 Y-type double knuckle joint



Material: Rolled steel plate

Material: Cast iron

Part no.	Applicable bore size (mm)	Αı	E1	Lı	ММ	R ₁	U1	ND ^{H10}	NX
Y-020B	20	16	20	36	M8 x 1.25	12	14	9 +0.058	9 +0.2
Y-032B	25	18	20	38	M10 x 1.25	12	14	9 +0.058	9 +0.2
Y-04D	32	22	24	55	M14 x 1.5	13	25	12 +0.070	16 +0.3
YHN-04A	40	22	24	55	M16 x 1.5	13	25	15 ^{+0.070}	16 +0.3
	•	•	•						

ø32

Part no.	ΝZ	Note
Y-020B	18	With CDP-1 (with retaining ring)
Y-030B	18	With CDP-1 (with retaining ring)
Y-04D	38	With CDP-3A (with cotter pin and flat washer)
YHN-04A	38	With CDPN-4 (with cotter pin)

Bracket for clevis type

* Order bracket pin separately.

CHQ

|CHK□

CHM


CHS□

CH2

CHA

Related Products


D-

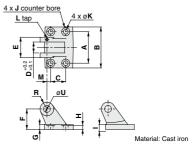

AD-FI-20 20 46 60 22 16 10 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	D	Applicable bore size		_		_	U (H8)		_	_			Γ.
AD-FI-25 25 46 60 22 16 10 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	Part no.		Α	В	С	D	Size	Tolerance	E	-	G	Н	'
AD-FI-32 32 56 80 30 16 12 *0.027 36 40 10 9 13 AD-FI-32 40 64 98 30 30 40 64 40 10 9 13 AD-CHAM4 40 64 88 30 30 44 60 *0.027 44 42 40 0 13 AD-CHAM4 40 64 88 30 30 44 66 *0.027 44 42 40 0 13 AD-CHAM4 40 40 40 40 40 40 40 40 40 40 40 40 40	AD-FI-20	20	46	60	22	16	10	+0.027	30	28	6.5	5.5	10
AD-CHM40 40 64 88 30 34 16 12 0 36 40 10 9 13	AD-FI-25	25	46	60	22	16	10		30	30	6.5	5.5	10
	AD-FI-32	32	56	80	30	16	12	+0.027	36	40	10	9	13
	AD-CHN-40	40	64	88	30	24	16		44	43	10	9	13

Part no.	J	K	L	М	R	Note
AD-FI-20	12	7	M4	5.5	10	M4 set screws (once)
AD-FI-25	12	7	M4	5.5	10	M4 set screws (once)
AD-FI-32	12	7	M5	7	12	M5 set screws (once)
AD-CHN-40	16	9	M5	10	12	M5 set screws (once)

 Bracket pin



Material: Carbon steel

	Part no.	Applicable bore size (mm)	Α	В	Size	(f7) Tolerance	D	Note
	AD-EI-20	20	45.5	35.5	10	-0.016 -0.034	3.2	with (2) cotter
ĺ	AD-EI-25	25	45.5	35.5	10	-0.016 -0.034	3.2	pins ø3.2 x 15 ℓ
	AD-EI-32	32	52	42	12	-0.016 -0.034	4	with (2) cotter
į	AE-CHN-40	40	60	50	16	-0.016 -0.034	4	pins ø4 x 20 ℓ

Knuckle pin ø20, ø25

1.15

Part no.: CDP-1
Material: Carbon steel

Part no.: CDP-3A CDPN-4
Material: Carbon steel

2 x oE
drill through

1.15

Retaining		\sim		^		امطم
Retaining	ring.	$^{\circ}$	type	Э	101	Sila

25

L1
Cotter pin: ø3 x 18 ℓ

ø**40**

5	Applicable bore size	С	(d9)				Е	N. I.		
Part no.	(mm)	Size	Tolerance	L ₁	L2	N	_	Note		
CDP-1	20	9	-0.040 -0.076					with (2) retaining rings:		
CDF-1	25	9	-0.076	-	_	_	-	C type 9		
CDP-3A	32	12	-0.050 -0.093	55.5	47.5	4	3	with (2) cotter pins $ø3 \times 18 \ell$ with (2) flat washer: polished round M12		
CDPN-4	40	15		49.7	41.7	5	3.2	with (2) cotter pins ø3.2 x 20 t		

 


CHN Series **Auto Switch Mounting**

Refer to pages 431 to 490 for detailed auto switch specifications.


Auto Switches: Proper Mounting Positions and Mounting Heights for Stroke End Detection

D-A9□V



A and B are the dimensions from the end of the head cover/rod cover to the end of the auto switch

 
D-M9 V/M9 WV/M9 AV



A and B are the dimensions from the end of the head cover/rod cover to the end of the auto switch.

 
D-A9□






A and B are the dimensions from the end of the head cover/rod cover to the end of the auto switch.

 
D-M9\(\to\)/M9\(\to\)/M9\(\to\)A




A and B are the dimensions from the end of the head cover/rod cover to the end of the auto switch.

  
D-C 7/C80






D-H7\(\to\)/H7\(\to\)/H7NF/H7BA

 

 



D-B5 -/B64/B59W

 



D-G5 / K59/G5 W/K59W/G5BA/G59F/G5NT

 

 

Auto Switch Proper Mounting Positions

(mm)

			So	lid state	auto swi	tch			Reed auto switch									
Bore size (mm)	D-M9□W(V) D- D-M9□A(V) D-		D-H7□ D-H7□ D-H7NI	W/H7C							D-C7□/C80 D-C73C/C80C		D-B5□/B64		D-B59W		D-A3□/A44	
	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В
20	23	14	18.5	9.5	15	6	13	4	19	10	19.5	10.5	13.5	4.5	16.5	7.5	13	4
25	23.5	13.5	19	9	15.5	5.5	13.5	3.5	19.5	9.5	20	10	14	4	17	7	13.5	3.5
32	25.5	16.5	21	12	17.5	8.5	15.5	6.5	21.5	12.5	22	13	16	7	19	10	15.5	6.5
40	31.5	21.5	27	17	23.5	13.5	21.5	11.5	27.5	17.5	28	18	22	12	25	15	21.5	11.5

Note) Adjust the auto switch after confirming the operating conditions in the actual setting.

Auto Sw	itch Mour	iting Heig	ints			(mm)
Bore size (mm)	D-M9□(V) D-M9□W(V) D-M9□A(V) D-A9□(V)	D-H7□/H7□W D-H7NF/H7BA D-C7□/C80	D-C73C/C80C	D-G5□/K59 D-G5□W/K59W D-G59F/G5BA D-G5NT/H7C D-B5□/B64 D-B59W	D-G39/K39 D-A3□	D-A44
	Hs	Hs	Hs	Hs	Hs	Hs
20	26	25.5	27	27.5	62	72
25	28	27.5	29	29.5	64	74
32	31.5	31	32.5	33	67.5	77.5
40	35.5	35	36.5	37	71.5	81.5

Minimum Auto Switch Mounting Stroke

					(mm)
Number of auto switches mounted					
Auto switch model	1 pc.	2 p		n pcs.	
	1 pc.	Different surfaces	Same surface	Different surfaces	Same surface
D-M9□	5	20	55	20 + 35 (n - 2)	55 + 35 (n - 2)
D-MI3	3	20	55	(n = 2, 4, 6) Note 3)	(n = 2, 3, 4, 5···)
D-M9□W	10	20	55	20 + 35 (n - 2)	55 + 35 (n - 2)
D-INIƏ W	10	20	55	(n = 2, 4, 6) Note 3)	(n = 2, 3, 4, 5···)
D-M9□A	10	25	60	25 ± 35 (n - 2)	60 + 35 (n - 2)
D-M9⊔A	10	25	60	(n = 2, 4, 6) Note 3)	(n = 2, 3, 4, 5···)
D 400	5	15	50	15 ± 35 (n - 2)	50 + 35 (n - 2)
D-A9□	5	15	50	(n = 2, 4, 6) Note 3)	(n = 2, 3, 4, 5···)
D-M9□V	5	20	0.5	20 25 (n – 2)	35 + 35 (n - 2)
D-M9□V	5	20	35	(n = 2, 4, 6···) Note 3)	(n = 2, 3, 4, 5···)
D-A9□V	5	15	25	15 + 35 (n - 2)	25 + 35 (n - 2)
D-A9□V	9UV 5 15 25	25	(n = 2, 4, 6···) Note 3)	(n = 2, 3, 4, 5···)	
D-M9□WV	10	20	35	20 + 35 (n - 2)	35 + 35 (n - 2)
D-M9□AV	10	20	33	(n = 2, 4, 6) Note 3)	(n = 2, 3, 4, 5···)
D-H7□/H7□W	10	15	60	15 + 45 (n - 2)	60 + 45 (n - 2)
D-H7NF/H7BA	10	15	60	(n = 2, 4, 6) Note 3)	(n = 2, 3, 4, 5···)
D-C7□	10	15	50	15 + 45 (n - 2)	50 + 45 (n - 2)
D-C80	10	15	50	(n = 2, 4, 6) Note 3)	
D-H7C				15 + 50 (n - 2)	65 + 50 (n - 2)
D-C73C D-C80C	10	15	65	(n = 2, 4, 6···) Note 3)	(n = 2, 3, 4, 5···)
D-G5□/K59					
D-G5□W/K59W	10	15	75	15 + 50 (n - 2)	75 + 55 (n - 2)
D-G59F/G5BA/G5NT	10	15	75	(n = 2, 4, 6···) Note 3)	(n = 2, 3, 4, 5···)
D-B5□/B64					
D-B59W	15	20	75	20 + 50 (n - 2)	75 + 55 (n - 2)
				(n = 2, 4, 6···) Note 3)	
D-G39/K39	10	35	100	35 + 30 (n - 2)	100 + 100 (n - 2)
D-A3□/A44				(n = 2, 3, 4, 5···)	(n = 2, 3, 4, 5···)


Note 3) When "n" is an odd number, an even number that is one larger than this odd number is used for the calculation. CHQ
CHK

CHM
CHS

CH2

CHA

Related
Products

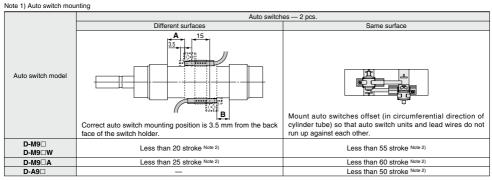

Note 2) Minimum stroke for auto switch mounting in types other than those mentioned in Note 1.

Operating Range

				(mm)
A 1 2	Bore size			
Auto switch model	20	25	32	40
D-M9□(V) D-M9□W(V) D-M9□A(V)	4.5	4	4	4.5
D-H7□/H7C D-H7□W D-H7NF/H7BA	4.5	5	4.5	5
D-G5□/K59/G59F D-G5□W/K59W D-G5BA/G5NT	5.5	5	4.5	5

				(mm)	
Auto switch model	Bore size				
Auto switch model	20	25	32	40	
D-G39/K39	9	8.5	10	10.5	
D-A9□(V)	8	7.5	7	8	
D-C7□/C80 D-C73C/C80C	10.5	9.5	8.5	10	
D-B5□/B64	13.5	11.5	10	12	
D-B59W	13.5	13	11.5	13.5	
D-A3□/A44	11.5	10	9	10.5	

^{*} Since this is a guideline including hysteresis, not meant to be guaranteed. (Assuming approximately ±30% dispersion.) There may be the case it will vary substantially depending on an ambient environment.



Auto Switch Mounting Brackets: Part Nos.

Auto switch model	Bore size (mm)						
Auto switch model	ø 20	ø 25	ø 32	ø40			
D-A9□(V) D-M9□(V) D-M9□W(V)	Note 1) BMA3-020 (A set of a, b, c, d)	BJ3-1+BHN3-025 (A set of g, h, i, j, k)	BJ3-1+BHN3-032 (A set of g, h, i, j, k)	BJ3-1+BHN3-040 (A set of g, h, i, j, k)			
D-M9 □ A(V) Note 2)	BMA3-020S (A set of b, c, e, f)	_	_	_			
D-H7□ D-H7□W D-H7NF D-C7□/C80 D-C73C/C80C	BMA2-020A (A set of c and d)	BHN3-025 (A set of c and d)	BHN3-032 (A set of c and d)	BHN3-040 (A set of c and d)			
D-H7BA	BMA2-020AS (A set of c and f)	BHN3-025 (A set of j and k)	BHN3-032 (A set of j and k)	BHN3-040 (A set of j and k)			
D-G5□/G5□W D-G59F D-G5BA/G5NT D-B5□/B64 D-B59W	BA-01 (A set of c and f)	BHN2-025 (A set of j and k)	BGS1-032 (A set of j and k)	BH2-040 (A set of j and k)			
D-G39/K39 D-A3□/A44	BD1-01M	BD1-02M	BHN1-032	BDS-04M			

Note 1) Since the switch bracket (made from polyamide) are affected in an environment where alcohol, chloroform, methylamines, hydrochloric acid or sulfuric acid is splashed over, so it cannot be used. Please consult SMC regarding other chemicals.

[Stainless steel mounting screw kits]

The following stainless steel mounting screw kits are available for use depending on the operating environment. (Switch mounting bands are not included and should be ordered separately.)

BBA3: D-G5, K5, B5, B6

BBA4: D-C7, C8, H7

Note) Refer to the table below for details on BBA3, BBA4.

The above stainless steel screws are used when a cylinder is shipped with the D-H7BA or G5BA auto switches.

When only an auto switch is shipped independently, the BBA3 or BBA4 is attached

Stainless steel mounting screw kit details

Part Contents			Applicable auto switch mounting bracket part nos.	Applicable
no.	Description	pcs.	Applicable auto switch mounting bracket part hos.	auto switches
			BA-01, BA-02, BA-32, BA-04, BA-05, BA-06, BA-08, BA-10	
			BA2-020, BA2-025, BA2-032, BA2-040	D DE D0
BBA3		1	BA5-050, BHN2-025, BSG1-032	D-B5, B6 D-G5, K5
	Auto switch		BH2-040, BH2-050, BH2-080, BH2-100	D-G5, N5
	mounting		BAF-32, BAF-04, BAF-05, BAF-06, BAF-08, BAF-10	
	screw set		BJ2-006, BJ2-010, BJ2-016	
DDA4	BBA4 1	4	BM2-020A, BM2-025A, BM2-032A, BM2-040A	D-C7, C8
BBA4		' B	BMA2-020A, BMA2-025A, BMA2-032A, BMA2-040A, BMA2-050A, BMA2-063A	D-H7
			BHN3-025, BHN3-032, BHN3-040	

Besides the models listed in "How to Order," the following auto switches are applicable. Refer to pages 431 to 490 for detailed auto switch specifications.

Auto switch type	Part no.	Electrical entry	Features	
	D-H7A1, H7A2, H7B		_	
Solid state	D-G59, G5P, K59			
	D-H7NW, H7PW, H7BW		5	
	D-G59W, G5PW, K59W	Grommet (in-line)	Diagnostic indication (2-color indicator)	
	D-G5BA, H7BA		Water resistant (2-color indicator)	
	D-G5NT		With timer	
	D-G59F		With diagnostic output (2-color indicator	
Reed	D-C73, C76, B53	0 () ()	_	
	D-C80	Grommet (in-line)	Without indicator light	

^{*} Solid state auto switches are also available with pre-wired connector. Refer to pages 474 and 475 for details.

* Normally closed (N.C. = b contact), solid state auto switches (D-M9□E(V)) are also available. For details, refer to page 443.

Note 2) When mounting a D-M9□A(V) type auto switch, if the switch bracket is mounted on the indicator light, it may damage the auto switch. Therefore, be sure to avoid mounting the switch bracket on the indicator light.

Note 3) D-A9□V, M9□V, M9□WV, and M9□A(V) models cannot be mounted on ø25 to ø40.

How to Mount and Move the Auto Switch

- 1. Tighten the screw under the specified torque when mounting auto
- 2. Set the auto switch mounting band perpendicularly to cylinder tube.





<Applicable auto switch>

Solid state D-M9N, M9P, M9B, M9NV, M9PV, M9BV

D-M9NW, M9PW, M9BW, M9NWV, M9PWV, M9BWV D-M9NA, M9PA, M9BA, M9NAV, M9PAV, M9BAV

Reed......D-A90, A93, A96, A90V, A93V, A96V

How to Mount and Move the Auto Switch

Mounting the Auto Switch (When the bore size is 20 mm)

- 1. Wrap the auto switch mounting band around the cylinder where the auto switch will be mounted without bending the reinforcing plates.
- 2. Connect the switch holder and switch bracket, and place them between the two ends of the auto switch mounting band (1).
- 3. Hook the bent part of the auto switch mounting band reinforcing plates onto the upper surface of the switch bracket. Bend the base of the auto switch mounting band reinforcing plates until the through holes of the switch bracket, the through holes of the auto switch mounting band, and the holes of the M3 female thread are aligned. Adjust the switch bracket so that both ends of the auto switch mounting band are inserted into the inner walls on both side surfaces of the switch bracket.

For the D-M9DA (V) type auto switch, do not install the switch bracket on the indicator light.

- 4. Pass the auto switch mounting screw (M3) supplied with the auto switch mounting band from the through-hole side of the auto switch mounting band and engage it with the M3 female thread of the auto switch mounting band through the through-hole in the switch bracket.
- 5. Tighten the auto switch mounting screw with the specified tightening torque (0.6 to 0.7 N·m)
- 6. Insert the auto switch into the auto switch mounting groove of the switch holder (2)
- 7. After checking the detection position, tighten the set screw (M2.5) supplied with the auto switch to secure the auto switch

Mounting the Auto Switch (When the bore size is 25 mm or more) 1. Attach the switch bracket to the switch holder. Align the convex part of the switch bracket with the concave part of the switch holder.

- 2. Mount the switch holder (1) between the auto switch mounting band (2) reinforcing plates.
- 3. Mount the switch holder (1) between the auto switch mounting band (2) reinforcing plates.
- 4. Insert the auto switch mounting screw through the holes in both reinforcing plates, and temporarily tighten the screw. 5. Remove the set screw from the auto switch.
- 6. Fit the switch spacer into the auto switch.
- 7. Insert the auto switch (6) into the switch holder from the back, and set it in place.
- 8. Tighten the auto switch mounting screw with the specified tightening torque (0.8 to 1.0 N·m).

Removing the Auto Switch (When the bore size is 25 mm or more) 1. Loosen the auto switch mounting screw, and remove it.


- 2. Remove the switch bracket from the switch holder.
- 3. Open the top of the switch holder, and remove the auto switch and spacer together from above.
- 4. Remove the switch spacer from the auto switch.

Tightening torque for the set screw (M2.5) supplied with the auto switch (N·m)

Auto switch model	Tightening torque	
D-M9□(V)		
D-M9□W(V)	0.05 to 0.15	
D-A9□(V)		
D-M9□A(V)	0.05 to 0.10	

When tightening the set screw supplied with the auto switch, use a watchmaker's screw driver with a handle diameter of 5 to 6 mm


e White (PBT) Switch holds Auto switch mounting screw (Zinc) For BMA3 f (Stainless steel

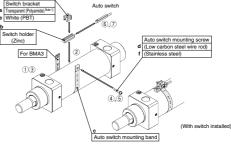

* Band (c) is mounted so that the projected part is on the internal side (contact side with the tube).

When the bore size is 25 mm or more

When the hore size is 20 mm

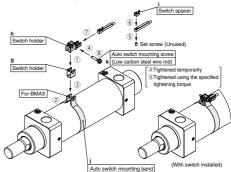

 


Figure 1. Switch insert angle

Adjustment the Auto Switch Position

- 1. To make the fine adjustment, loosen the set screw (M2.5) supplied with the auto switch and slide the auto switch inside the auto switch mouthing groove to adjust the position.
- 2. To move the auto switch setting position largely, loosen the screw (M3) that secures the auto switch mounting band and slide the auto switch together with the switch holder on the cylinder tube to adjust the position.

Note) When removing the screw connection part with the auto switch mounting screw after the auto switch mounting band has been assembled, be careful not to drop the switch bracket, switch holder, auto switch mounting screw, or auto switch mounting band.



CHO

CHK□ CHN

CHM

CHS

CH2

CHA

Related

Products

D- \square

How to Mount and Move the Auto Switch

⚠ Caution


- Tighten the screw under the specified torque when mounting auto switch.
- 2. Set the auto switch mounting band perpendicularly to cylinder tube.





<Applicable auto switch>

Solid state D-G59, D-G5P, D-K59, D-G5BA D-G59W, D-G5PW, D-K59W D-G59F, D-G5NT, D-G5NB Reed D-B53, D-B54, D-B64, D-B59W

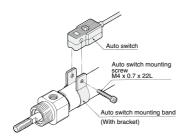

- Put an auto switch mounting band on the cylinder tube and set it at the auto switch mounting position.
- Put the mounting section of the auto switch between the auto switch mounting band mounting holes, then adjust the position of mounting holes of switch to those of mounting band.
- Lightly thread the auto switch mounting screw through the mounting hole into the thread part of band fitting.
- 4. After reconfirming the detection position, tighten the auto switch mounting screw to secure the auto switch while properly contacting the auto switch bottom part and the cylinder tube. (The tightening torque of M4 screw should be about 1 to 1.2 N·m.)
- (The tightening torque of M4 screw should be about 1 to 1.2 N·m.)


 5. Modification of the detection position should be made in the condi-

<Applicable auto switch>


Solid state D-H7A1, D-H7A2, D-H7B, D-H7BA D-H7C, D-H7NF, D-H7NW, D-H7PW

D-H7BW Reed D-C73, D-C76, D-C80, D-C73C, D-C80C

When the hore size is 20 mm

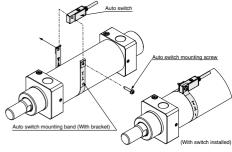

When the bore size is 25 mm or more

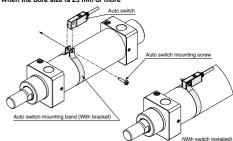

- * Band (c) is mounted so that the projected part is on the internal side (contact side with the tube).
- 1. Wrap the auto switch mounting band around the cylinder where the auto switch will be mounted without bending the reinforcing plates.
- 2. Hook the bent part of the auto switch mounting band reinforcing plates onto the upper surface of the switch. Bend the base of the auto switch mounting band reinforcing plates until the through holes of the switch bracket, the through holes of the auto switch mounting band, and the holes of the M3 female thread are aligned. Adjust the switch bracket so that both ends of the auto switch mounting band are inserted into the inner walls on both side surfaces of the switch bracket.
- Lightly thread the auto switch mounting screw through the mounting hole into the thread part of the auto switch mounting band fitting.
- 4. After setting the whole body to the detecting position by sliding, tighten the auto switch mounting screw to secure the auto switch while properly contacting the auto switch bottom part and the cylinder tube. (Tightening torque of M3 screw should be 0.8 to 1 N·m.)
- Modification of the detection position should be made in the condition of 3.



tion of 3

How to Mount and Move the Auto Switch


⚠ Caution

- Tighten the screw under the specified torque when mounting auto switch.
- 2. Set the auto switch mounting band perpendicularly to cylinder tube.




<Applicable auto switch>
Solid state D-G39, D-K39
Reed D-A33, D-A34, D-A44

How to Mount and Move the Auto Switch D-A3, D-G3/K3 type

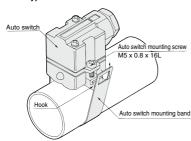

D-A4

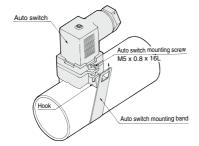

- Loosen the auto switch mounting screws at both sides to pull down the hook.
- Put an auto switch mounting band on the cylinder tube and set it at the auto switch mounting position, and then hook the band.
- 3. Screw lightly the auto switch mounting screw.
- 4. Set the whole body to the detecting position by sliding, tighten the mounting screw to secure the auto switch. (The tightening torque should be about 2 to 3 N·m.)
- Modification of the detecting position should be made in the condition of 3.

CHQ

|CHK□

CHN

СНМ

CHS□

CH2□

V..._

CHA Related


Products

D-

Series CHN

Model Selection 1

Cylinder Cushion Selection

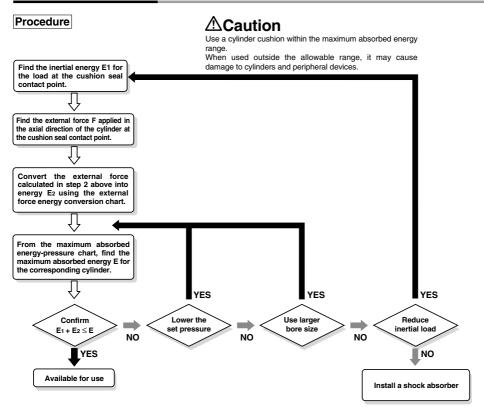

Calculation Example

<Design conditions> Cylinder: CHN25 Set pressure P1: 5 MPa

Load weight M: 50 kg

Piston speed V: 0.3 m/s (at the cushion seal contact point)

Load transfer direction: Downward $\,\theta$: 30°

 
(External force applied to the cylinder is gravity only).

Operating direction: Out

Gravitational acceleration q: 9.8 m/s2

<Calculation>

- 1. Load inertial energy E1 at the cushion seal contact point
 - $E_1 = MV^2/2 = 50 \times 0.3^2/2 = 2.25J$
- 2. External force F applied in axial direction of the cylinder at the cushion seal contact point $F = Mg \sin \theta = 50 \times 9.8 \times \sin 30^{\circ} = 245N$



- 3. Convert the external force calculated in step 2 into energy E2.
 - In the "External force and energy conversion chart" on page 313-2, draw a vertical line from the value of F (= 245N). The point where this line intersects with the diagonal line (0.27J) is the energy caused by external force.

 $E_2 = 0.27J$

4. Find the maximum absorbed energy E for a cylinder. In the "Maximum absorbed energy and pressure chart" on page 313-2, draw a vertical line from the set pressure 5MPa. The point where this line intersects with the line for ø25 (3.7J) is the maximum absorbed energy.

F = 3.7.1

5. Confirm that E₁ + E₂ ≤ E $E_1 + E_2 = 2.25 + 0.27 = 2.52J$ Since E = 3.7J, $E_1 + E_2 \le E$


Therefore, the cylinder cushion is available for use.

Series CHN Model Selection 2

Maximum Absorbed Energy Chart & External Force and Energy Conversion Chart at Cushion Seal Contact Point

Maximum absorbed energy pressure and chart in terms of cushion performance characteristics

Be sure to keep the combined values of kinetic energy of the load operated by the cylinder and the energy generated by the external force within the values that are shown in the bottom chart.

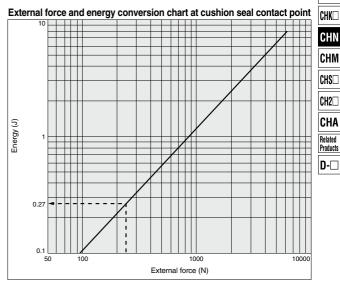

CHQ