



Pulse Input Type/Positioning Typep. 1109

Incremental Type/LECSA Series





Pulse Input Type/Positioning Typep. 1109

Absolute Type/LECSB-T Series





With STO sub-function

CC-Link Direct Input Type p. 1109

Absolute Type/LECSC-T Series







SSCNET II/H Type

.....p. 1109

Absolute Type/LECSS-T Series





With STO sub-function



Network Card Type p. 1109

Absolute Type/LECSN □-T Series

EtherCAT

EtherNet/IP™

PROFINET



Safety function STO available



MECHATROLINK- II Typep. 1128

Absolute Type/LECYM Series





Absolute Type/LECYU Series

MECHATROLINK-Ⅲ Typep. 1128



With STO sub-function





LECSA/LECS -T/LECY Series List

			Compatil	ole moto	r	Con	ntrol met	hod	Applicatio	n/Function	Compatible option
	Series	100 W	200 W	400 W	750 W	Positioning*1	Pulse	Network direct input	Synchronous	Pushing operation*4	Setup software
Incremental Type	LECSA (Pulse input type/ Positioning type)	•	•	•		Up to 7 points	•				LEC-MRC2
	LECSB-T (Pulse input type/ Positioning type)	•	•	•	•	Up to 255 points *5	*5			*4 *5	LEC-MRC2
	CC-Link LECSC-T*8 (CC-Link direct input type)	•	•	•	•	Up to 255 points		CC-Link Ver.1.10			LEC-MRC2
Absolute Type	LECSS-T (SSCNET III/H type) Compatible with Mitsubishi Electric's servo system controller network	•	•	•	•			SSCNET III/H	*2	*4	LEC-MRC2
Absolu	EtherCAT EtherNet/IP™ PROFINET LECSN□-T (Network card type)	•	•	•	•	Up to 255 points		PROFINET EtherCAT EtherNet/IP™	*7		LEC-MRC2
	MECHATROLINK-II LECYM	•	•	•				MECHATRO LINK-II	*3		SigmaWin+™
	MECHATROLINK-II LECYU	•	•	•				MECHATRO LINK-II	*3		SigmaWin+™


^{*1} For positioning types, the settings need to be changed in order to use the max. set values. Setup software (MR Configurator2™) LEC-MRC2 is required. *2 Available when a Mitsubishi motion controller is used as upper level equipment


^{*2} Available when a Mitsubishi motion controller is used as upper level equipment
*3 Available when a motion controller is used as upper level equipment
*4 The LECSB2-T is only applicable when the control method is positioning. The point table is used to set the pushing operation settings. When selecting the LECSS2-T, combine it with upper level equipment (such as the Simple Motion module manufactured by Mitsubishi Electric Corporation) which has a pushing operation function.
** For customer-provided PLC and motion controller setting and usage instructions, confirm with the retailer or manufacturer.
*5 The LECSB2-T can be used by adding the "MR Configurator2 dedicated file for the LECSB-T" to the setup software (MR Configurator2™: LEC-MRC2□). Please download this dedicated file from the SMC website: https://www.smcworld.com
*6 The LECSN□-T point table mode is only available for PROFINET and EtherCAT.
*7 Only EtherCAT is available. Confirm the upper-level equipment specifications in advance.
*8 The torque control mode is not available for the LECSC-T.

Gain adjustment using auto tuning

Auto-tuning function


 Controls the difference between the command value and the actual action

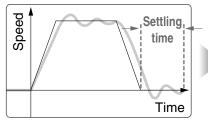


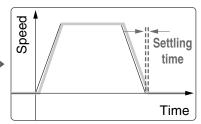

Vibration suppression control function

 Automatically suppresses low-frequency machine vibrations (1 to 100 Hz)

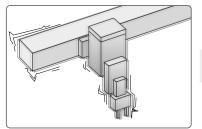

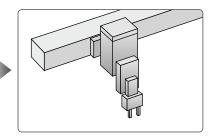

With display setting function

One-touch adjustment button


One-touch servo adjustment

Display

Display the monitor, parameters, and alarm.

Settings

Set the parameters, monitor display, etc., with push buttons.

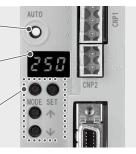

LECSA

Display

Display the monitor, parameters, and alarm.

Settings

Set the parameters, monitor display, etc., with push buttons.



(With the front cover opened) **LECSB-T**

Display

Display the communication status with the driver, the alarm, and the point table no.

Settings

Control the Baud rate, station number, and the occupied station count.



(With the front cover opened) **LECSC-T**

Display

Display the communication status with the driver and the alarm.

Settings

Switches for axis setting, control axis deactivation, switching to the test operation, etc.



LECSS2-T

Display

Display the communication status with the driver and the alarm.

Settings

Switches for axis setting, switching to the test operation, etc.



LECSN□-T

Settings

Switches for station address, number of transmission bytes, etc.

Display

Display the driver status and alarm.




LECYU

Settings


Switches for station address, communication speed, number of transmission bytes, etc.


Display

Display the driver status and alarm.

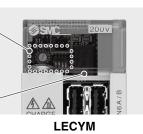



SMC

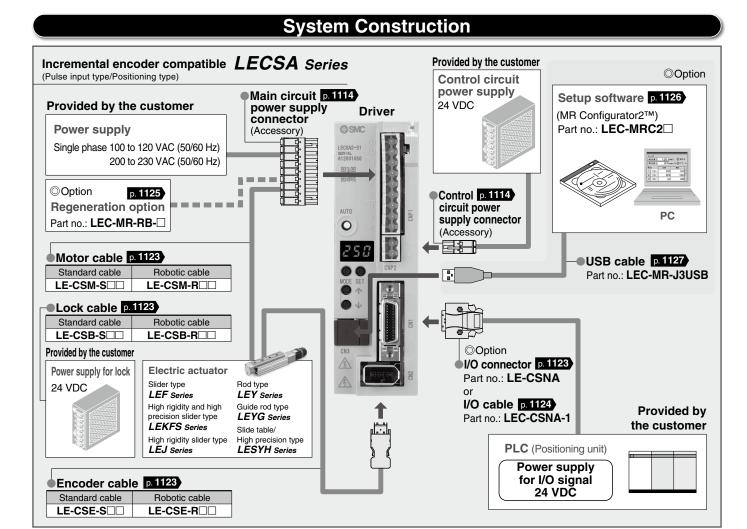

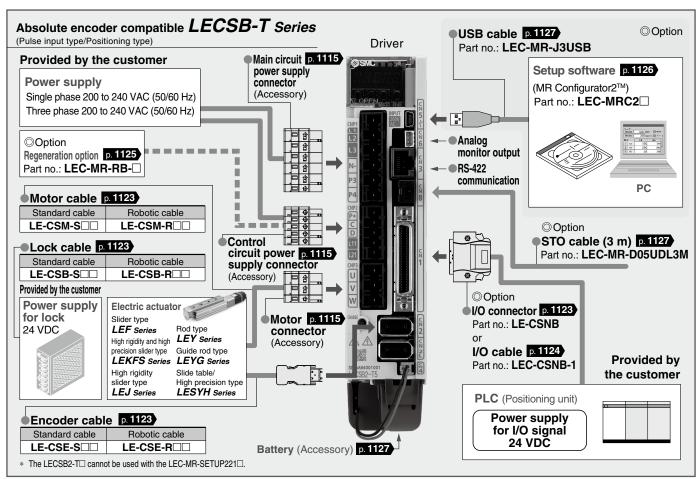


System Construction

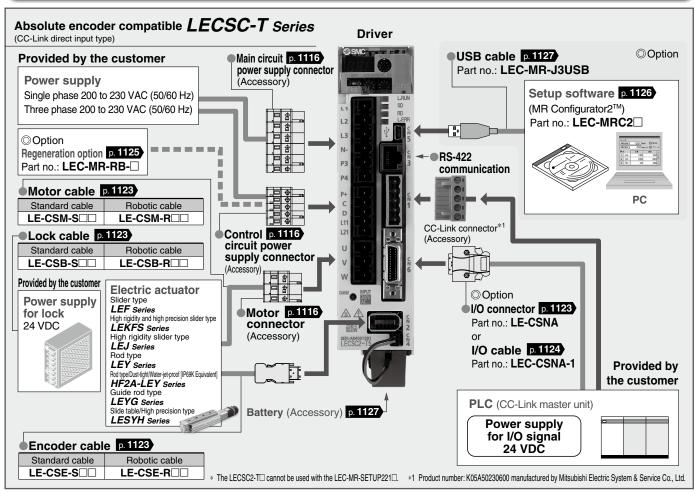


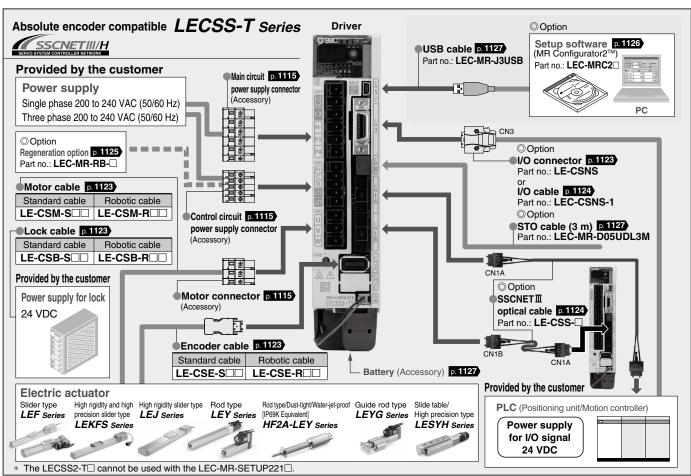

System Construction Absolute encoder compatible *LECSN*□-*T* Series (Network card type) Main circuit p. 1115 Option Provided by the customer power supply connector Driver Setup software (MR Configurator2™) Part no.: LEC-MRC2□ p. 1126 **Power supply** USB cable p. 1127 (Accessory) Part no.: LEC-MR-J3USB Single phase 200 to 240 VAC (50/60 Hz) 77 Three phase 200 to 240 VAC (50/60 Hz) p. 1125 PC Regeneration option ı Part no.: **LEC-MR-RB-**□ Ī Option ī Network card p. 1125 Motor cable p. 1123 ij. Part no.: **LEC-S-N**□ Ī Option Standard cable Robotic cable STO cable (3 m) p. 1127 Part no.: LEC-MR-D05UDL3M ш LE-CSM-S□□ LE-CSM-R□□ Lock cable p. 1123 Control circuit power Standard cable Robotic cable supply connector p. 1115 LE-CSB-S□□ LE-CSB-R□□ (Accessory) Provided by the customer Option Power supply for lock Electric actuator Motor I/O connector p. 1123 Part no.: LE-CSNS Slider type Rod type/ 24 VDC connector Dust-tight/Water-jet-proof (Accessory) IP69K Equivalent High rigidity and p. 1115 HF2A-LEY Serie I/O cable p. 1124 high precision slider type Part no.: LEC-CSNS-1 LEKFS Series Provided by Guide rod type High rigidity LEYG Series the customer slider type Slide table/ LEJ Series High precision type LESYH Series PLC Rod type **LEY Series Power supply** for I/O signal Battery (Accessory) p. 1127 Encoder cable p. 1123 **24 VDC** Standard cable Robotic cable LE-CSE-S□□ LE-CSE-R□□ * The LECSN□-T cannot be used with the LEC-MR-SETUP221□.



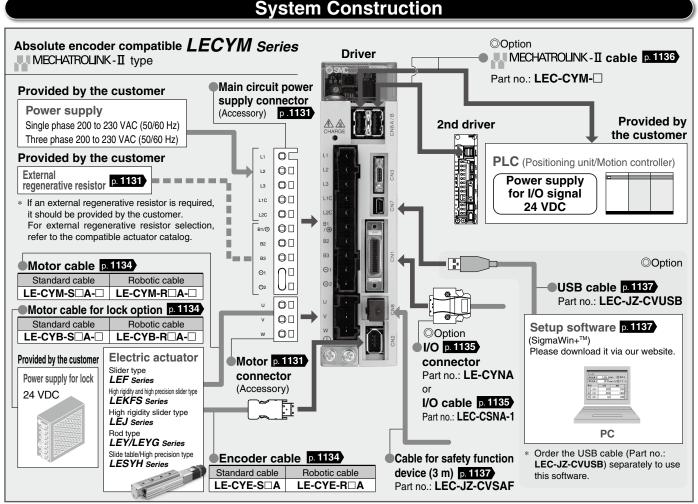

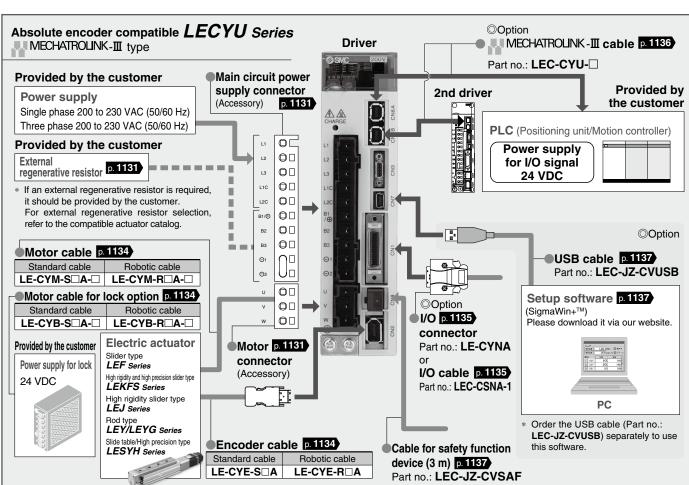

Incremental Type

Absolute Type

AC Servo Motor Driver LECSA/LECS -T Series

	LECSA	LECS□-T
Power supply	100 to 120 VAC	200 to 240 VAC
voltage	200 to 230 VAC	(LECSC-T series: 200 to 230 VAC)
Motor capacity	100/200/400 W	100/200/400/750 W

LECSA Series (Pulse input type/Positioning type)

• Up to 7 positioning points by point table

• Input type: Pulse input

• Control encoder: Incremental 17-bit encoder (Resolution: 131072 p/rev)

• Parallel input: 6 inputs output: 4 outputs



LECSB-T Series (Pulse input type/Positioning type)

Positioning by up to 255 point tables

• Input type: Pulse input (Sink (NPN) type interface/Source (PNP) type interface)

• Control encoder: Absolute 22-bit encoder (Resolution: 4194304 p/rev)

• STO (Safe Torque Off) safety function available

• Parallel input: 10 inputs output: 6 outputs



LECSC-T Series (CC-Link direct input type)

- Position data/speed data setting and operation start/stop
- Positioning by up to 255 point tables (when 2 stations are occupied)
- Up to 32 drivers can be connected (when 2 stations are occupied) with CC-Link communication.
- Applicable Fieldbus protocol: CC-Link (Ver. 1.10, Max. communication speed: 10 Mbps)
- Control encoder: Absolute 18-bit encoder (Resolution: 262144 p/rev)



LECSS-T Series (SSCNET II /H type)

- Applicable Fieldbus protocol:
 SSCNETII/H
 - (High-speed optical communication, max. bidirectional communication speed: 150 Mbps)
- Bidirectional communication speed: 3 times
- SSCNET II/H and SSCNET III products are compatible.
- Improved noise resistance
- STO (Safe Torque Off) safety function available
- Control encoder: Absolute 22-bit encoder (Resolution: 4194304 p/rev)

LECSN□-**T** Series (Network card type)

- Supports 3 types of network card (EtherCAT, EtherNet/IP™, and PROFINET)
- STO (Safe Torque Off) safety function available
- Control encoder: Absolute 22-bit encoder (Resolution: 4194304 p/rev)







Power supply voltage

200 to 230 VAC

Motor capacity

100/200/400 W

LECYM Series (MECHATROLINK-II type)



• Number of connectable drivers: 30 units (Transmission distance: Max. 50 m in total)

• Max. transmission speed: 10 Mbps

• Min. transmission cycle: 250 μs

• Control encoder: Absolute 20-bit encoder (Resolution: 1048576 p/rev)

• STO (Safe Torque Off) safety function available


• Compliant with the SEMI F47 Standard (Torque limit for low DC power supply voltage for main circuit)



LECYU Series (MECHATROLINK-III type)

■ Applicable Fieldbus protocol: ■ MECHATROLINK-Ⅲ





• Max. transmission speed: 100 Mbps

• Min. transmission cycle: 125 μs

• Control encoder: Absolute 20-bit encoder (Resolution: 1048576 p/rev)

• STO (Safe Torque Off) safety function available

• Compliant with the SEMI F47 Standard (Torque limit for low DC power supply voltage for main circuit)



stations)

CONTENTS

AC Servo Motor

Incremental Type/Absolute Type LECSA/LECS□-T Series




How to Order	p. 1109
Dimensions	p. 1110
Specifications	p. 1112
Power Supply Wiring Example	p. 1114
Control Signal Wiring Example	p. 1117
Options	p. 1123

AC Servo Motor

™ MECHATROLINK Compatible Absolute Type *LECY* Series



	How to Order	p. 1128
	Dimensions	p. 1128
	Specifications	p. 1129
	Power Supply Wiring Example	p. 1131
LECYM LECYU	Control Signal Wiring Example	p. 1132
	Options	p. 1134
Specific Product Precaution	ons	p. 1138



AC Servo Motor Driver

Incremental Type

LECSA Series (Pulse Input Type/Positioning Type)










Absolute Type

LECSB-T (Pulse Input Type/Positioning Type)/LECSC-T (CC-Link Direct Input Type) LECSN -T (Network Card Type)/LECSS-T (SSCNET II/H Type) Series

How to Order

For LECSA

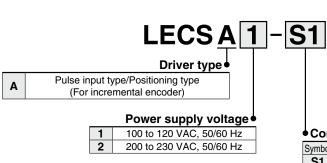




- * If an I/O connector is required, order the
- part number "LE-CSNA" separately. If an I/O cable is required, order the part number "LEC-CSNA-1" separately.


Compatible motor type

Symbol	Type	Capacity	Encoder
S1	AC servo motor (S2*1)	100 W	
S3	AC servo motor (S3*1)	200 W	Incremental
S4	AC servo motor (S4*1)*2	400 W	

- The symbol shows the motor type (actuator).
- *2 Only available for power supply voltage "200 to 230 VAC"

For LECSB-T/LECSC-T/LECSS-T

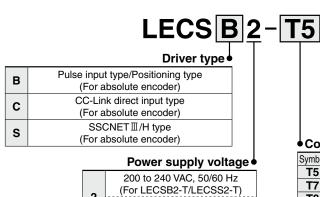





- If an I/O connector is required, order the part number "LE-CSN□" separately.
- * If an I/O cable is required, order the part number "LEC-CSN□-1" separately.
 (Since the electric actuator will not operate without forced stop


(EM2) wiring when using the LECSB-T in any mode other than positioning mode, an I/O connector or an I/O cable is required.)


Compatible motor type

Symbol	Type	Capacity	Encoder
T5	AC servo motor (T6*1)	100 W	
T7	AC servo motor (T7*1)	200 W	Absolute
T8	AC servo motor (T8*1)	400 W	Absolute
T9	AC servo motor (T9*1)	750 W	

^{*1} The symbol shows the motor type (actuator).

For LECSND-T

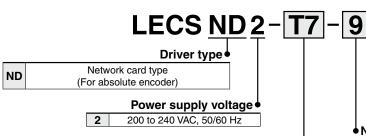



Symbol	Type	Capacity	Encoder
T7	AC servo motor (T7*1)	200 W	
T8	AC servo motor (T8*1)	400 W	Absolute
T9	AC servo motor (T9*1)	750 W	

^{*1} The symbol shows the motor type (actuator).



- * If an I/O connector is required, order the part number "LE-CSNS" separately.
 If an I/O cable is required, order the part
- number "LEC-CSNS-1" separately.


Network card type*1


Nil	Nil Without network card	
Е	EtherCAT	
9	EtherNet/IP™	
Р	PROFINET	

^{*1} Only the "Without network card" option is UL compliant.

How to Order

For LECSN-T

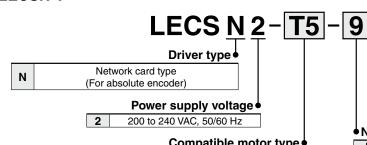



Symbol	Type	Capacity	Encoder
T5	AC servo motor (T6*1)	100 W	Absolute

^{*1} The symbol shows the motor type (actuator).




- If an I/O connector is required, order the part number "LE-CSNS" separately.
 If an I/O cable is required, order the part number "LEC-CSNS-1" separately.

Nil	Nil Without network card	
E	EtherCAT	
9	EtherNet/IP™	
Р	PROFINET	


^{*1} Only the "Without network card" option is UL compliant.



Dimensions

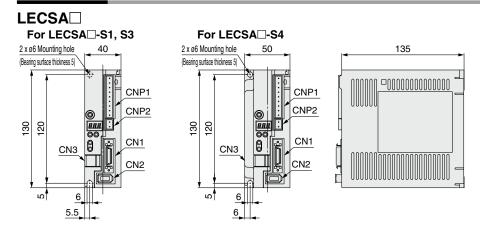


Connector name	Description
CN1	I/O signal connector
CN2	Encoder connector
CN3	USB communication connector
CNP1	Main circuit power supply connector
CNP2	Control circuit power supply connector

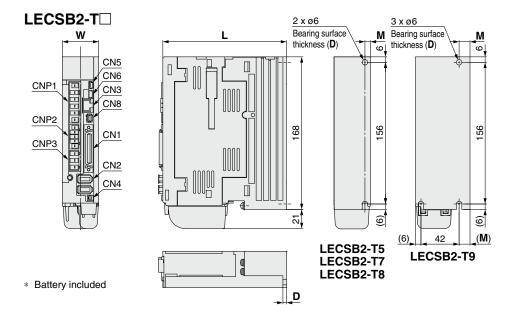

Connector name	Description
CN1	I/O signal connector
CN2	Encoder connector
CN3	RS-422 communication connector
CN4	Battery connector
CN5	USB communication connector
CN6	Analog monitor connector
CN8	STO input signal connector
CNP1	Main circuit power supply connector
CNP2	Control circuit power supply connector
CNP3	Servo motor power connector

Dimensions [mm]						
Model W L D						
	105	4	6			
40	133					
	170	5				
60	185	6	12			
	W 40	W L 40 135 170	W L D 40 135 4 170 5			

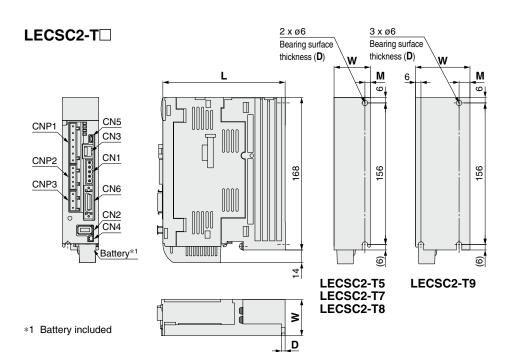


Connector name	Description
CN1	CC-Link connector
CN2	Encoder connector
CN3	RS-422 communication connector
CN4	Battery connector
CN5	USB communication connector
CN6	I/O signal connector
CNP1	Main circuit power supply connector
CNP2	Control circuit power supply connector
CNP3	Servo motor power connector

Dimensions [mm]					
Model	M				
LECSC2-T5		135	4		
LECSC2-T7	40	133	4	6	
LECSC2-T8		170	5		
LECSC2-T9	60	185	6	12	




Dimensions

LECSS2-T□

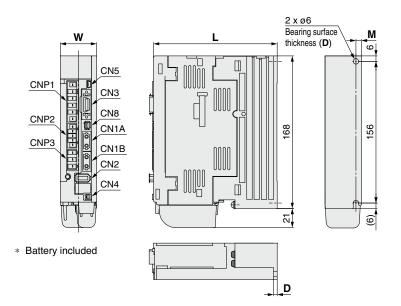

Connector name	Description
CN1A	Front axis connector for SSCNET III/H
CN1B	Rear axis connector for SSCNET III/H
CN2	Encoder connector
CN3	I/O signal connector
CN4	Battery connector
CN5	USB communication connector
CN8	STO input signal connector
CNP1	Main circuit power supply connector
CNP2	Control circuit power supply connector
CNP3	Servo motor power connector

Dimensions [mm]					
Model	W	L	D	M	
LECSS2-T5		135	4		
LECSS2-T7	40	133	4	6	
LECSS2-T8		170	5		
LECSS2-T9	60	185	6	12	

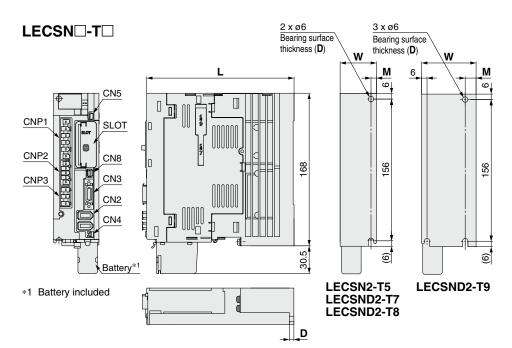

Connector name	Description
CN3	I/O signal connector
CN2	Encoder connector
CN4	Battery connector
CN5	USB communication connector
CN8	STO input signal connector
CNP1	Main circuit power supply connector
CNP2	Control circuit power supply connector
CNP3	Servo motor power connector
SLOT	Network card slot

Dimensions [mm]					
Model	W	L	D	M	
LECSN2-T5					
LECSND2-T7	50	161	5	6	
LECSND2-T8					
LECSND2-T9	60	191	6	12	

Specifications

LECSA Series

	Model LECSA1-S1 LECSA1-S3 LECSA2-S1 LECSA2-S3 LECSA					LECSA2-S4	
Rated po	wer supply capacity [kVA]	0.3 0.5 0.3 0.5 0.9					
Max. pov	ver supply capacity [kVA]	0.9 1.5 0.9 1.5 2.7					
Compati	ble motor capacity [W]	100 200 100 200 400					
Compati	ble encoder	Incremental 17-bit encoder (Resolution: 131072 p/rev)					
Main	Power voltage [V]	Single phase 100 to	120 VAC (50/60 Hz)	Single pha	ase 200 to 230 VAC (50/60 Hz)	
power	Allowable voltage fluctuation [V]	Single phase 8	85 to 132 VAC	Sing	le phase 170 to 253	VAC	
supply	Rated current [A]	3.0	5.0	1.5	2.4	4.5	
Control	Control power supply voltage [V]			24 VDC			
power	Allowable voltage fluctuation [V]			21.6 to 26.4 VDC			
supply	Rated current [A]			0.5			
Parallel i	nput			6 inputs			
Parallel o	output	4 outputs					
Max. inp	ut pulse frequency [pps]		1 M (for differentia	al receiver), 200 k (for	r open collector)*2		
	In-position range setting [pulse]	0 to ±65535 (Command pulse unit)					
	Error excessive			±3 rotations			
Function	Torque limit			Parameter setting			
	Communication			USB communication			
	Point table			Up to 7 points			
Operatin	g temperature range [°C]			0 to 55 (No freezing)			
Operatin	g humidity range [%RH]		90 c	r less (No condensat	tion)		
Storage 1	temperature range [°C]		_	20 to 65 (No freezing	1)		
Storage	humidity range [%RH]		90 c	r less (No condensat	tion)		
Enclosu	re	IP20					
Insulatio	n resistance [M Ω]	Between the housing and SG: 10 (500 VDC)					
Weight [g]		60	00		700	

LECSB-T Series

	Model	LECSB2-T5	LECSB2-T7	LECSB2-T8	LECSB2-T9	
Rated po	ower supply capacity [kVA]	0.3	0.5	0.9	1.3	
Max. pov	ver supply capacity [kVA]	1.05	1.75	3.15	4.55	
Compati	ble motor capacity [W]	100	200	400	750	
Compati	npatible encoder Absolute 22-bit encoder (Resolution: 4194304 p/rev)					
Main	Power voltage [V]*3	Three phase 200	to 240 VAC (50/60 Hz),	Single phase 200 to 24	0 VAC (50/60 Hz)	
power	Allowable voltage fluctuation [V]*3	Three phase 170	to 264 VAC (50/60 Hz),	Single phase 170 to 26	4 VAC (50/60 Hz)	
supply	Rated current [A]	0.9	1.5	2.6	3.8	
Control	Control power supply voltage [V]		Single phase 200 to	240 VAC (50/60 Hz)		
power	Allowable voltage fluctuation [V]		Single phase 1	70 to 264 VAC		
supply	Rated current [A]		0	.2		
Parallel i	nput		10 ir	puts		
Parallel o	output	6 outputs				
Max. inp	ut pulse frequency [pps]	4 M (for differential receiver), 200 k (for open collector)			tor)	
	In-position range setting [pulse]	0 to ±65535 (Command pulse unit)				
-	Error excessive		±3 rot	ations		
Function	Torque limit	Parameter setting or external analog input setting (0 to 10 VDC)				
runction	Communication	USB communication, RS422 communication*1				
	Point table		Up to 25	55 points		
	Pushing operation		Point table no. input me	ethod, Up to 127 points		
Operatin	g temperature range [°C]		0 to 55 (N	o freezing)		
Operatin	g humidity range [%RH]		90 or less (No	condensation)		
Storage	temperature range [°C]			No freezing)		
Storage	humidity range [%RH]		90 or less (No	condensation)		
Enclosu	re		IP	20		
Insulatio	n resistance [MΩ]		Between the housing a	and SG: 10 (500 VDC)		
Safety fu	inction		STO (IEC/EI	N 61800-5-2)		
Safety st	andards*2	EN ISO 13849-1 Category 3 PL e, IEC 61508 SIL 3, EN 62061 SIL CL3, EN 61800-5-2				
Weight [g]	80	00	1000	1400	

st1 USB communication and RS422 communication cannot be performed at the same time.



^{*2} The safety level depends on the set value of the driver parameter [Pr. PF18 STO diagnosis error detection time] and whether STO input diagnosis by TOFB output is performed or not. Refer to the LECSB-T operation manual for details.

^{*3} Three phase 400 VAC is not supported.

Specifications

LECSC-T Series

	Мо	del	LECSC2-T5 LECSC2-T7 LECSC2-T8 LECSC2-T9				
Rated power	r supply ca	pacity [kVA]	0.3	0.5	0.9	1.3	
Max. power s	supply cap	acity [kVA]	1.05	1.75	3.15	4.55	
Compatible i	motor capa	acity [W]	100	200	400	750	
Compatible 6	encoder		Al	osolute 18-bit encoder (Resolution: 262144 p/re	ev)	
Main Power voltage [V]*3			·	to 230 VAC (50/60 Hz),			
power Allowable voltage fluctuation [V]*3				phase 170 to 253 VAC,	Single phase 170 to 25	3 VAC	
	ated currer	· L · J	0.9	1.5	2.6	3.8	
00		er supply voltage [V]					
l · . —		Itage fluctuation [V]			70 to 253 VAC		
	ated currer	b 4	0.2				
·		eldbus protocol (Version)	,				
1	onnection		CC-Link Ver	. 1.10 compliant cable (Shielded 3-core twisted	pair cable)*1	
Re	emote stati	on number		1 to	64		
	able ength	Communication speed [bps]/ Maximum overall cable length [m]	16 k/1200, 625 k/900, 2.5 M/400, 5 M/160, 10 M/100				
specifications Tel	ingui	Cable length between stations [m]					
	O occupation of the court of th		1 station occupied (Remote I/O 32 points/32 points)/(Remote register 4 words/4 words) 2 stations occupied (Remote I/O 64 points/64 points)/(Remote register 8 words/8 words)				
Nι	umber of c	onnectable drivers	Up to 42 (when 1 station is occupie	d by 1 driver), Up to 32 (when 2 static	ns are occupied by 1 driver), when th	ere are only remote device stations.	
Re	emote regi	ster input	Availa	ble with CC-Link commi	unication (2 stations occ	cupied)	
Command Po	oint table N	lo. input		munication, RS422 communication occupied): 31 points, (points		ations occupied): 255 points	
Inc	ndexer posi	tioning input	Available with CC-Link com CC-Link communication (1 s	munication station occupied): 31 points, 0	CC-Link communication (2 sta	ations occupied): 255 points	
Communicat	tion function	on		USB communication, R	S-422 communication*2	2	
Operating te	emperature	range [°C]		0 to 55 (N	o freezing)		
Operating hu	umidity rar	ige [%RH]		90 or less (No	condensation)		
Storage tem	•	<u> </u>		-20 to 65 (f	No freezing)		
Storage hum	midity range	e [%RH]	90 or less (No condensation)				
Fueles			Enclosure IP00				
Enclosure					00		
Insulation re	esistance [l	Μ Ω]		Between the housing		1400	

^{*1} If the system comprises of both CC-Link Ver. 1.00 and Ver. 1.10 compliant cables, Ver. 1.00 specifications are applied to the overall cable length and the cable length between stations.

LECSS-T Series

	Model	LECSS2-T5 LECSS2-T7 LECSS2-T8 LECSS2-T9					
Rated po	ower supply capacity [kVA]	0.3	0.5	0.9	1.3		
Max. pov	ver supply capacity [kVA]	1.05	1.75	3.15	4.55		
Compati	ble motor capacity [W]	100	200	400	750		
Compati	ble encoder	Ab	solute 22-bit encoder (F	Resolution: 4194304 p/r	ev)		
Main	Power voltage [V]*2	Three phase 200	to 240 VAC (50/60 Hz),	Single phase 200 to 24	0 VAC (50/60 Hz)		
power	Allowable voltage fluctuation [V]*2	Three phase 170 to 264 VAC (50/60 Hz), Single phase 170 to 264 VAC (50/60 Hz)					
supply	Rated current [A]	0.9	1.5	2.6	3.8		
Control	Control power supply voltage [V]	Single phase 200 to 240 VAC (50/60 Hz)					
power	Allowable voltage fluctuation [V]	Single phase 170 to 264 VAC					
supply	Rated current [A]		0	.2			
Applicab	ole Fieldbus protocol	S	SCNET II/H (High-spee	ed optical communicatio	n)		
Commur	nication function		USB com	munication			
Operatin	g temperature range [°C]		0 to 55 (N	o freezing)			
Operatin	g humidity range [%RH]		90 or less (No	condensation)			
Storage	temperature range [°C]		-20 to 65 (I	No freezing)			
Storage	humidity range [%RH]		90 or less (No	condensation)			
Enclosu	re		IP	20			
Insulatio	n resistance [MΩ]		Between the housing	and SG: 10 (500 VDC)			
Safety fu	ınction		STO (IEC/EI	N 61800-5-2)			
Safety st	tandards*1	EN ISO 13849-1 Ca	ategory 3 PL d, EN 6150	08 SIL 2, EN 62061 SIL	CL2, EN 61800-5-2		
Weight [g]	80	00	1000	1400		

^{*1} Refer to the LECSS-T operation manual for details.



^{*2} USB communication and RS422 communication cannot be performed at the same time.

^{*3} Three phase 400 VAC is not supported.

^{*2} Three phase 400 VAC is not supported.

Specifications

LECSN□-T Series

	Model	LECSN2-T5	LECSND2-T7	LECSND2-T8	LECSND2-T9	
Compatil	ble motor capacity [W]	100	200	400	750	
Compatil	ble encoder	Ab	solute 22-bit encoder (F	Resolution: 4194304 p/re	ev)	
Main	Power voltage [V]	Three phase 200	to 240 VAC (50/60 Hz),	Single phase 200 to 24	0 VAC (50/60 Hz)	
power	Allowable voltage fluctuation [V]	Three phase 170	to 264 VAC (50/60 Hz),	Single phase 170 to 26	4 VAC (50/60 Hz)	
supply	Rated current [A]	0.9	1.5	2.6	3.8	
Control	Control power supply voltage [V]		Single phase 200 to	240 VAC (50/60 Hz)		
power	Allowable voltage fluctuation [V]	Single phase 170 to 264 VAC				
supply	Rated current [A]	0.2				
Applicab	le Fieldbus protocol	PROFINET, EtherCAT, EtherNet/IP™				
Function	Communication	USB communication				
FullClion	Point table*1		Up to 25	55 points		
Operating	g temperature range [°C]		0 to 55 (No	o freezing)		
Operating	g humidity range [%RH]		90 or less (No	condensation)		
Storage t	temperature range [°C]		-20 to 65 (f	No freezing)		
Storage I	humidity range [%RH]		90 or less (No	condensation)		
Enclosur	re		IP.	20		
Insulation	n resistance [MΩ]		Between the housing	and SG: 10 (500 VDC)		
Safety fu	nction	STO (IEC/EN 61800-5-2)				
Safety st	andards*2	EN ISO 13849-1 Category 3 PL e, IEC 61508 SIL 3, EN 62061 SIL CL3, EN 61800-5-2				
Weight [g	al		1000	-	1400	


^{*1} Only supports PROFINET and EtherCAT

^{*2} The safety level depends on the set value of the driver parameter [Pr. PF18 STO diagnosis error detection time] and whether STO input diagnosis by TOFB output is performed or not. Refer to the LECSND-T operation manual for details.



Power Supply Wiring Example: LECSA

LECSA□-□

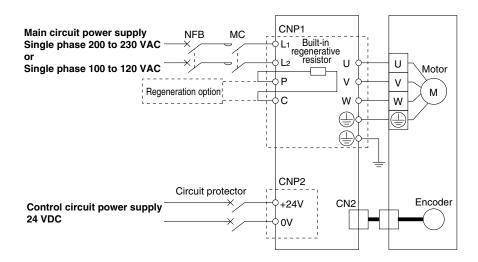


Main Circuit Power Supply Connector: CNP1 * Accessory

Terminal name	Function	Details		
	Protective earth (PE)	Should be grounded by connecting the servo motor's earth terminal and the control panel's protective earth (PE)		
L ₁	Main circuit	Connect the main circuit power supply. LECSA1: Single phase 100 to 120 VAC, 50/60 Hz		
L2	power supply	LECSAT: Single phase 100 to 120 VAC, 50/60 Hz LECSA2: Single phase 200 to 230 VAC, 50/60 Hz		
Р	Regeneration option	Terminal to connect regeneration option LECSA -S1: Not connected at time of shipping LECSA -S3, S4: Connected at time of shipping		
С	negeneration option	* If regeneration option is required for "Model Selection," connect to this terminal.		
U	Servo motor power (U)			
V	Servo motor power (V)	Connect to motor cable (U, V, W).		
W	Servo motor power (W)			

Control Circuit Power Supply Connector: CNP2 * Accessory

Terminal name	Function	Details				
24V	Control circuit power supply (24 V)	24 V side of the control circuit power supply (24 VDC) supplied to the driver				
0V	Control circuit power supply (0 V)	0 V side of the control circuit power supply (24 VDC) supplied to the driver				

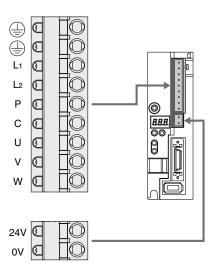


Power Supply Wiring Example: LECSB2-T□, LECSS2-T□, LECSN□-T□

For single phase 200 VAC

CNP1 MCCB MC ĊL1 Single phase CNP3 200 to 0L2 U U 240 VAC Motor ٧ ٧ L₃ Μ . 0 N(−) W W **Р**з P4 PΕ CNP2 **₽(+)** Regeneration option С D Encoder CN₂

For three phase 200 VAC

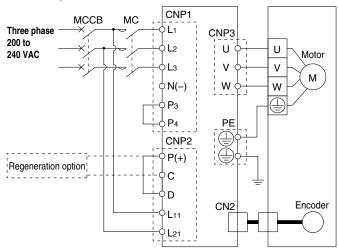

* For single phase 200 to 240 VAC, power supply should be connected to L₁ and L₃ terminals, with nothing connected to L₂. Please note that the wiring locations differ from the LECS□.

Main Circuit Power Supply Connector: CNP1 | * Ad


Terminal name	Function	Details				
L ₁		Connect the main circuit power supply.				
L2	Main circuit	LECSB2-T/LECSS2-T/LECSND2-T:				
	power supply	Single phase 200 to 240 VAC, 50/60 Hz Connection terminal: L1, L3				
L3		Three phase 200 to 240 VAC, 50/60 Hz Connection terminal: L1, L2, L3				
N(-)		Do not connect.				
P 3		Connect between P ₃ and P ₄ . (Connected at time of shipping)				
P4	Connect between F3 and F4. (Connected at time of snipping)					

Control Circuit Power Supply Connector: CNP2 * Accessory

Terminal name	Function	Details		
P(+)	Regeneration	Connect between P(+) and D. (Connected at time of shipping) * If regeneration option is required for "Model Selection," connect to this terminal.		
D	option			
L11	Control circuit	Connect the control circuit power supply. LECSB2-T/LECSS2-T/LECSND2-T:		
L21	power supply	Single phase 200 to 240 VAC, 50/60 Hz Connection terminal: L ₁₁ , L ₂₁		

Motor Connector: CNP3 * Accessory

Terminal name	Function	Details
U	Servo motor power (U)	
V	Servo motor power (V)	Connect to motor cable (U, V, W).
W	Servo motor power (W)	

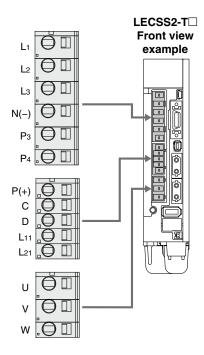


Power Supply Wiring Example: LECSC2-T□

For single phase 200 VAC

CNP1 NFB МС **Հ** L₁ Single phase CNP3 200 to U U 230 VAC Motor ψLз ٧ ٧ Μ ļΝ W W **P**3 P4 CNP2 P(+) Regeneration option С D CN₂ Encoder 1 11 L21

For three phase 200 VAC

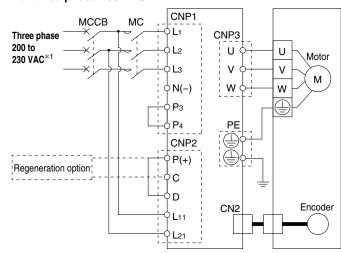

- *1 Three phase 400 VAC is not supported.
- * For single phase 200 to 230 VAC, power supply should be connected to L1 and L2 terminals, with nothing connected to L3.

Main Circuit Power Supply Connector: CNP1 * Accessory


Terminal name	Function	Details			
L ₁	Main circuit	Connect the main circuit power supply.			
L2	power supply	LECSC2-T: Single phase 200 to 230 VAC, 50/60 Hz Connection terminal: L1, L2			
Lз	power suppry	Three phase 200 to 230 VAC, 50/60 Hz Connection terminal: L ₁ , L ₂ , L ₃			
N	Do not connect.				
Рз	Connect between P ₃ and P ₄ . (Connected at time of shipping)				
P4					

Control Circuit Power Supply Connector: CNP2 * Accessory

Terminal name	Function	Details		
P(+)	Dogonoration	Connect between P and D. (Connected at time of shipping)		
С	Regeneration option	* If regeneration option is required for "Model Selection," connect to this		
D	орион	terminal.		
L11	Control circuit	Connect the control circuit power supply.		
L21	power supply	LECSC2-T: Single phase 200 to 230 VAC, 50/60 Hz Connection terminal: L11, L21		

Motor Connector: CNP3 * Accessory


Terminal name	Function	Details
U	Servo motor power (U)	
V	Servo motor power (V)	Connect to motor cable (U, V, W).
W	Servo motor power (W)	

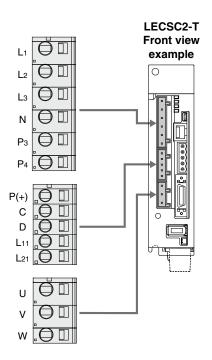

Control Signal Wiring Example: LECSA

LECSA□-□

This wiring example shows connection with a PLC (FX3U- $\square\square$ MT/ES) manufactured by Mitsubishi Electric Corporation as when used in position control mode. Refer to the LECSA series Operation Manual and any technical literature or operation manuals for your PLC and positioning unit before connecting to another PLC or positioning unit.

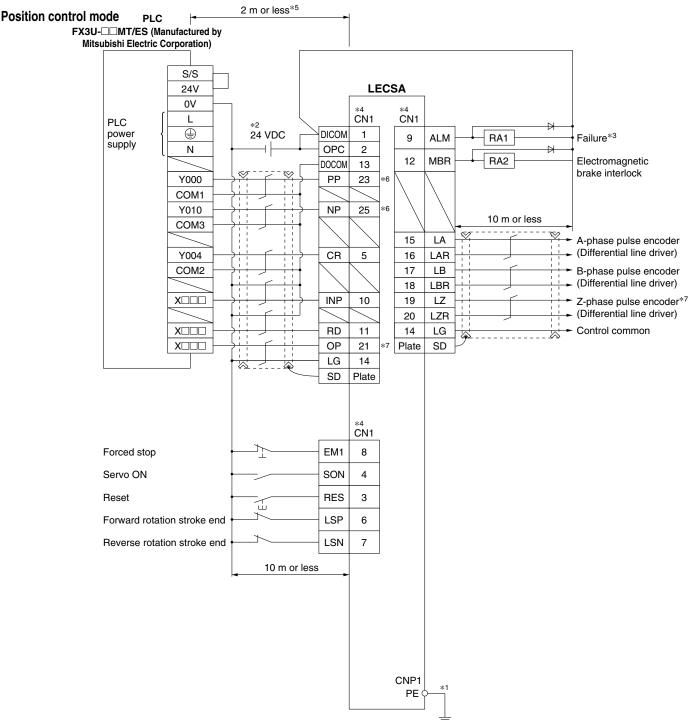


- *1 For preventing electric shock, be sure to connect the driver main circuit power supply connector (CNP1)'s protective earth (PE) terminal (marked 🏐) to the control panel's protective earth (PE).
- *2 For interface use, supply 24 VDC ±10% 200 mA using an external source. 200 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity. Refer to the Operation Manual for required current for interface.
- *3 The failure (ALM) is normally ON. When it is OFF (alarm occurs), stop the PLC signal using the sequence program.
- *4 Signals of the same name are connected inside the driver.
- *5 For command pulse input with an open collector method. When a positioning unit loaded with a differential line driver method is used, it is 10 m or less.
- *6 If the command pulse input is open collector method, it supports only the sink (NPN) type interface. It does not correspond to the source (PNP) type
- *7 The Z-phase pulse encoder corresponds to the differential line driver method and the open collector method. If the Z-phase pulse encoder is using the open collector method, it supports only the sink (NPN) type interface. It does not correspond to the source (PNP) type interface.

Control Signal Wiring Example: LECSA


In this wiring example, the device of the CN1-10 pin in the initial status has been changed to the device shown below. For details on the device and changing method, refer to the LECSA series Operation Manual. CN1-10: MEND (Travel completion)

Positioning mode (Point table method) For sink (NPN) I/O interface

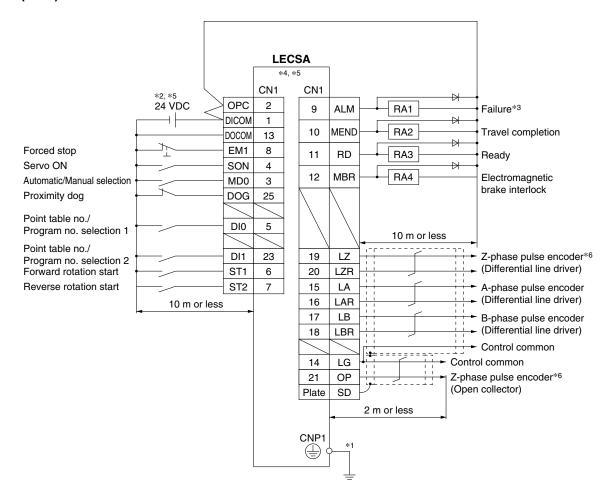

- *1 For preventing electric shock, be sure to connect the driver's protective earth (PE) terminal (marked 🏐) to the control panel's protective earth (PE).
- *2 For interface use, supply 24 VDC ±10% 200 mA using an external source. 200 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity.
- *3 The failure (ALM) is normally ON.
- st 4 Signals of the same name are connected inside the driver.
- *5 The wiring example is for the sink (NPN) type interface. Refer to the LECSA series Operation Manual for the source (PNP) type interface. Note that the 23 pin and 25 pin cannot be used for the source type interface.
- *6 The Z-phase pulse encoder corresponds to the differential line driver method and the open collector method. If the Z-phase pulse encoder is using the open collector method, it supports only the sink (NPN) type interface. It does not correspond to the source (PNP) type interface.

Control Signal Wiring Example: LECSC2-T□

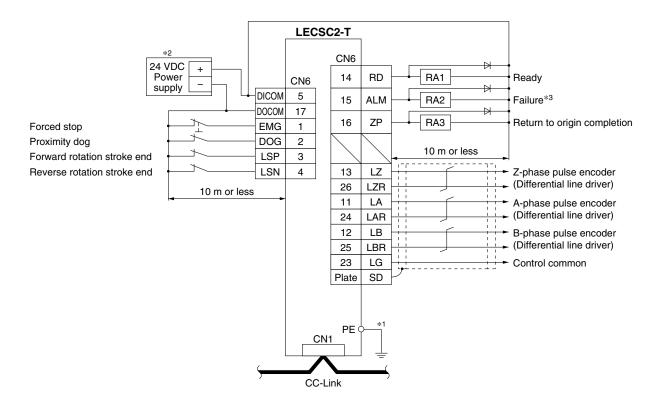

^{*1} For preventing electric shock, be sure to connect the driver's protective earth (PE) terminal (marked 🏐) to the control panel's protective earth (PE).


^{*2} For interface use, supply 24 VDC ±10% 150 mA using an external source.

^{*3} The failure (ALM) is normally ON. When it is OFF (alarm occurs), stop the PLC signal using the sequence program.

Control Signal Wiring Example: LECSB2-T□

This wiring example shows connection with a positioning unit (QD75D) manufactured by Mitsubishi Electric Corporation as when used in position control mode. Refer to the LECSB2-T series Operation Manual and any technical literature or operation manuals for your PLC and positioning unit before connecting to another PLC or positioning unit.

Position control mode For sink (NPN) I/O interface

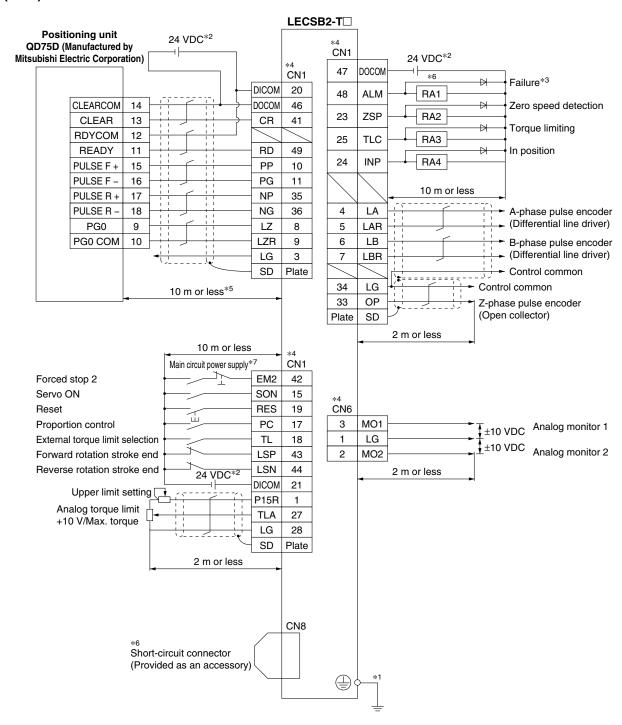


- *1 For preventing electric shock, be sure to connect the driver's protective earth (PE) terminal (marked 🏐) to the control panel's protective earth (PE).
- *2 For interface use, supply 24 VDC ±10% using an external source. Set the total current capacity to 500 mA. 500 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity.
- *3 The failure (ALM) is normally ON. When it is OFF (alarm occurs), stop the PLC signal using the sequence program.
- *4 Signals of the same name are connected inside the driver.
- *5 For command pulse input with a differential line driver method. For open collector method, it is 2 m or less.
- *6 When not using the STO function, use the driver with the short-circuit connector (provided as an accessory) inserted.
- *7 Configure a circuit to turn off EM2 when the main circuit power is turned off to prevent any unexpected restarts of the driver.



Control Signal Wiring Example: LECSB2-T□


In this wiring example, the devices of the CN1-22 pin, CN1-23 pin, and CN1-25 pin in the initial status have been changed to the devices shown below. For details on the devices and changing method, refer to the LECSB2-T series Operation Manual. CN1-22: CPO (Rough match)/CN1-23: ZP (Return to origin completion)/CN1-25: MEND (Travel completion)

Positioning mode (Point table method) For sink (NPN) I/O interface

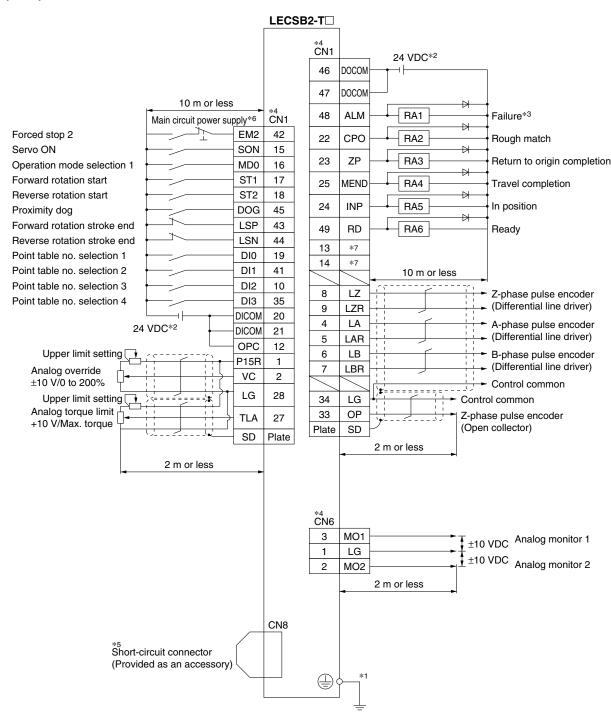

- *1 For preventing electric shock, be sure to connect the servo amplifier's protective earth (PE) terminal (marked) to the control panel's protective earth
- *2 For interface use, supply 24 VDC ±10% using an external source. Set the total current capacity to 500 mA. 500 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity.
- *3 The ALM (Failure) is normally ON. (Normally closed contact)
- st4 Signals of the same name are connected inside the servo amplifier.
- *5 When not using the STO function, use the servo amplifier with the short-circuit connector (provided as an accessory) inserted.
- *6 Configure a circuit to turn off EM2 when the main circuit power is turned off to prevent any unexpected restarts of the driver.
- *7 Output devices are not assigned in the initial status. Assign the output devices as necessary.


Control Signal Wiring Example: LECSN□-T□

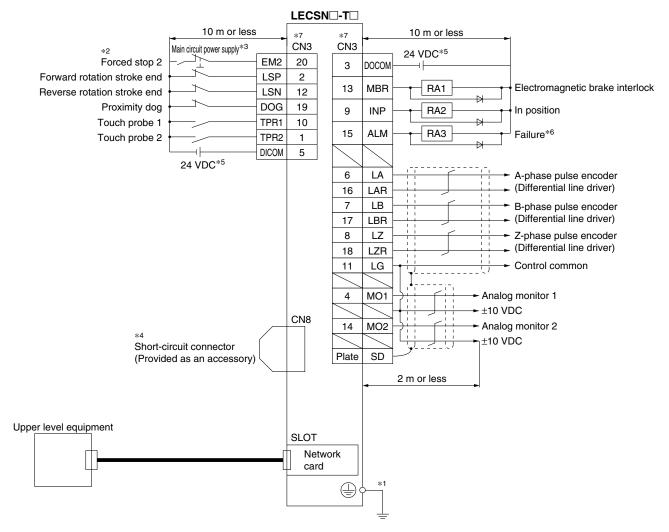

- *1 For preventing electric shock, be sure to connect the driver's protective earth (PE) terminal (marked 🖨) to the control panel's protective earth (PE).
- *2 If upper level equipment does not have forced stop function, always install the forced stop 2 switch (normally closed contact).
- *3 Configure a circuit to turn off EM2 when the main circuit power is turned off to prevent any unexpected restarts of the driver.
- *4 When not using the STO function, use the driver with the short-circuit connector (provided as an accessory) inserted.
- *5 For interface use, supply 24 VDC ±10% using an external source. Set the total current capacity to 300 mA. 300 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity.
- *6 The ALM (Failure) is normally ON. (Normally closed contact)
- *7 Signals of the same name are connected inside the driver.



Control Signal Wiring Example: LECSS2-T□

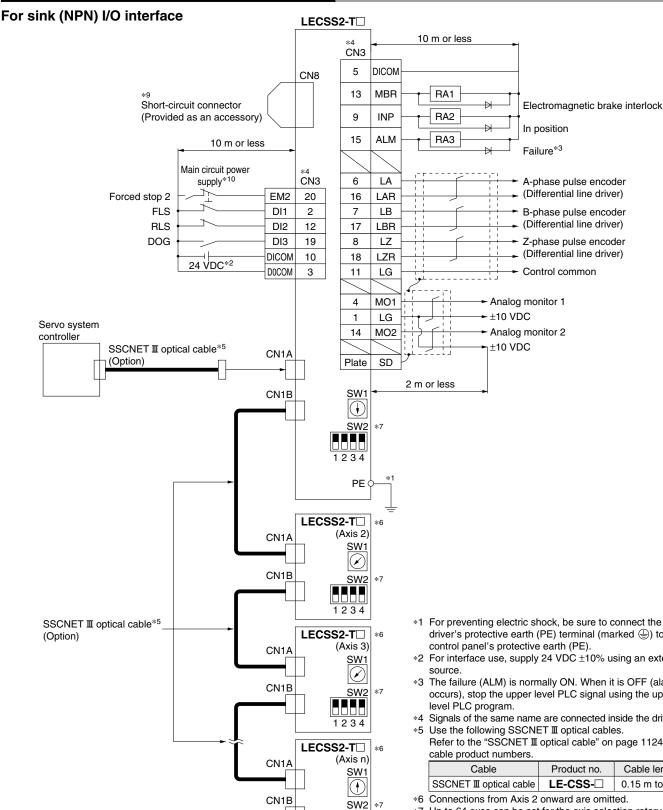

- *1 For preventing electric shock, be sure to connect the driver's protective earth (PE) terminal (marked (1)) to the
- *2 For interface use, supply 24 VDC ±10% using an external
- *3 The failure (ALM) is normally ON. When it is OFF (alarm occurs), stop the upper level PLC signal using the upper
- *4 Signals of the same name are connected inside the driver.
- Refer to the "SSCNET III optical cable" on page 1124 for

Cable	Product no.	Cable length	
SSCNET I optical cable	LE-CSS-□	0.15 m to 3 m	

- *6 Connections from Axis 2 onward are omitted.
- Up to 64 axes can be set for the axis selection rotary switch (SW1) and auxiliary axis number setting switches (SW2-3, SW2-4) in combination. Note that the number of connection axes depends on the specifications of the upper level PLC.
- *8 Be sure to place a cap on unused CN1A/CN1B.
- When not using the STO function, use the driver with the shortcircuit connector (provided as an accessory) inserted.
- *10 Configure a circuit to turn off EM2 when the main circuit power is turned off to prevent any unexpected restarts of the driver.





1234

Cap*8

Options

Motor cable, Lock cable, Encoder cable (LECSA, LECS□-T common)

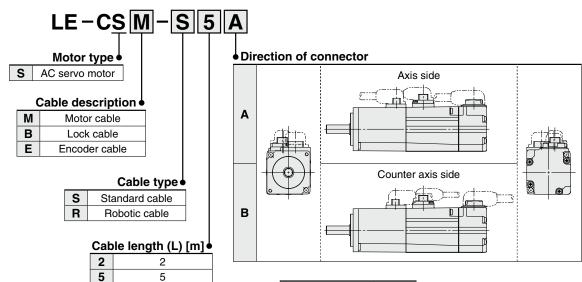



Α

10

Product no.	ø D
LE-CSM-S□A	6.2
LE-CSM-S□B	0.2
LE-CSM-R□A	5.7
LE-CSM-R□B	5.7

LE-CSB-R□A

LE-CSB-R□B

			_	_
LE-CSM-R□B	5.7	LE-CSM-SA□	10	
		LE-CSM-R2□	2	
		LE-CSM-R5□	5	Г
	_	LE-CSM-RA□	10	Г
Product no.	ø D			_
LE-CSB-S□A	4.7	Weight		_
LE-CSB-S□B	4.7	Product no.	Length [m]	١


4.5

Weight

Product no.

LE-CSM-S2

LE-CSM-S5□



ı	F-(CSF.		-	Fnco	der	cable
_		$\sigma \sigma =$	-1 11 1			ucı	Cable



*1 If using an actuator with a lock, a lock cable is required.

weight							
Product no.	Length [m]	Weight [g]					
LE-CSB-S2□	2	80					
LE-CSB-S5□	5	200					
LE-CSB-SA□	10	400					
LE-CSB-R2□	2	80					
LE-CSB-R5□	5	200					
LE-CSB-RA□	10	400					

Length [m] Weight [g]


180

800

Weight

Product no.	Length [m]	Weight [g]
LE-CSE-S2□	2	220
LE-CSE-S5□	5	600
LE-CSE-SA□	10	1200
LE-CSE-R2□	2	220
LE-CSE-R5□	5	600
LE-CSE-RA□	10	1200

I/O connector (Without cable, Connector only)



37. 4 39

LE-CSNA

52.4

LE-CSNB



LE-CSNS

Weight		
Product no.		
LE-CSNA		
LE-CSNB		

LE-CSNS

Weight [g]

25

30


16

- * LE-CSNA: 10126-3000PE (connector)/10326-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent LE-CSNB: 10150-3000PE (connector)/10350-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent
 - LE-CSNS: 10120-3000PE (connector)/10320-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent
- * Applicable conductor size: AWG24 to 30
- If using the LECSB-T in any mode other than positioning mode, forced stop (EM2) wiring is required in all cases. (The electric actuator will not operate without the wiring.)
 - Prepare an I/O connector or an I/O cable in advance.



Options

SSCNET III optical cable (LECSS2-T□)

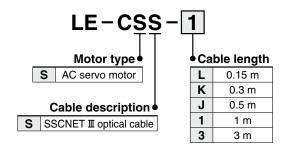



 * LE-CSS-□ is MR-J3BUS□M manufactured by Mitsubishi Electric Corporation.

Weight

Product no.	Length [m]	Weight [g]
LE-CSS-L	0.15	100
LE-CSS-K	0.3	100
LE-CSS-J	0.5	200
LE-CSS-1	1	200
LE-CSS-3	3	200

I/O cable

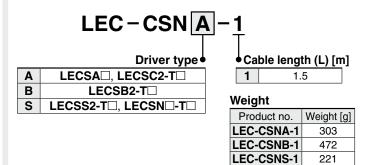

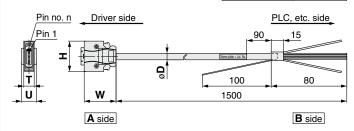

- * LEC-CSNA-1: 10126-3000PE (connector)/10326-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent LEC-CSNB-1: 10150-3000PE (connector)/10350-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent LEC-CSNS-1: 10120-3000PE (connector)/10320-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent
- * Conductor size: AWG24
- If using the LECSB-T in any mode other than positioning mode, forced stop (EM2) wiring is required in all cases. (The electric actuator will not operate without the wiring.)

Prepare an I/O connector or an I/O cable in advance.

Cable O.D.

Product no.	ø D
LEC-CSNA-1	11.1
LEC-CSNB-1	13.8
LEC-CSNS-1	9.1

Dimensions/Pin Nos.

Product no.	W	Н	Т	U	Pin no. n
LEC-CSNA-1		37.2		14	14
LEC-CSNB-1	39	52.4	12.7	18	26
LEC-CSNS-1		33.3		14	21

Wiring

LEC-CSNA-1: Pin nos. 1 to 26 LEC-CSNB-1: Pin nos. 1 to 50 LEC-CSNS-1: Pin nos. 1 to 20

Conr	ector	Pair no.	Insulation	Dot mark	Dot
pin	no.	of wire	color	Dollilark	color
	1	1	Orango		Red
	2	'	Orange		Black
	3	2	Light		Red
	4		gray		Black
	5	3	White		Red
	6	3	vviile		Black
	7	4	Yellow		Red
	8	4	reliow		Black
ige	9	5	Pink		Red
A side	10	5	FILIK		Black
	11	6	Orongo		Red
	12	6	Orange		Black
	13	7	Light		Red
	14	'	gray		Black
	15		\//bi+-		Red
	16	8	White		Black
	17		Vallou		Red
	18	9	Yellow		Black

	nector no.	Pair no. of wire	Insulation color	Dot mark	Dot color
Piii	19				Red
	20	10	Pink		Black
	21	11	Orango		Red
	22	11	Orange		Black
	23	12	Light		Red
	24	12	gray		Black
4	25	13	White		Red
A side	26	10	VVIIILE		Black
A	27	14	Yellow		Red
,	28	14	+ Tellow		Black
	29	15	Pink		Red
	30	15	FILIK		Black
	31	16	Orange		Red
	32	10	Orange		Black
	33	17	Light		Red
	34	17	gray		Black

Connector pin no.		Pair no. of wire	Insulation	Dot mark	Dot color	
Piii	35	-			Red	
	36	18	White		Black	
	37	10	Yellow		Red	
	38	19	reliow		Black	
	39	20	Pink		Red	
	40 20	20	PILIK		Black	
	41	21	21	Orange	Continuous)	Red
ige	42		Orange	Continuous)	Black	
A side	43		Light	Continuous)	Red	
	44		gray	Continuous)	Black	
	45	23	White	Continuous)	Red	
	46	23	vviille	Continuous)	Black	
	47	24	Yellow	Continuous)	Red	
	48	4	1 CHOW	Continuous)	Black	
	49	25	Pink	Continuous)	Red	
	50		I IIIK	Continuous)	Black	

Options

Regeneration option (LECS□ common)




Regeneration option type


032 Allowable regenerative power 3			
12	Allowable regenerative power 100 W		
32	Allowable regenerative power 300 W		

 Confirm regeneration option to be used in "Model Selection."

LEC-MR-RB-032

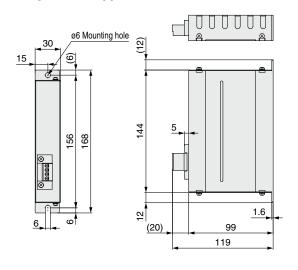

LEC-MR-RB-12

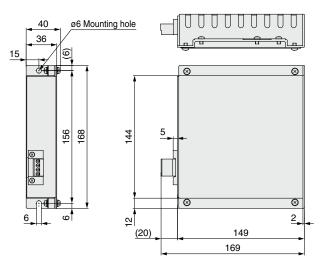

Weight

Product no.	Weight [kg]
LEC-MR-RB-032	0.5


* MR-RB032 manufactured by Mitsubishi Electric Corporation

Weight

Product no.	Weight [kg]		
LEC-MR-RB-12	1.1		

* MR-RB12 manufactured by Mitsubishi Electric Corporation

LEC-MR-RB-32

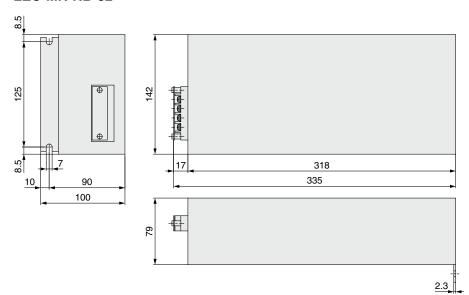

Weight

11 Olgini		
Pro	oduct no.	Weight [kg]
LEC-MR-RB-32		2.9

* MR-RB32 manufactured by Mitsubishi Electric Corporation

Options


Network card (LECSN□-T□)


LEC-S-NE

Network card type

NE	EtherCAT	
N9	9 EtherNet/IP™	
NP	PROFINET	

LEC-S-□ common

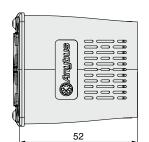





Weight

Product no.	Weight [g]
LEC-S-□	30



AC Servo Motor Driver LECSA/LECS -T Series

Options








Drivers







Setup software (MR Configurator2™) (LECSA, LECSB2-T□, LECSC2-T□, LECSS-T, LECSN□-T□ common)

LEC-MRC2

Display language

Nil	Japanese version					
Е	English version					
С	Chinese version					

* SW1DNC-MRC2-□ manufactured by Mitsubishi Electric Corporation Refer to Mitsubishi Electric Corporation's website for operating environment and version upgrade information. MR Configurator2™ is a registered trademark or trademark of Mitsubishi Electric Corporation.

Adjustment, waveform display, diagnostics, parameter reading/writing, and test operations can be performed on a PC.

Hardware Requirements*1 *3

Equipment		Description		
OS		Microsoft® Windows® 11 Education Operating System Microsoft® Windows® 11 Enterprise Operating System Microsoft® Windows® 11 Pro Operating System Microsoft® Windows® 11 Home Operating System Microsoft® Windows® 10 Education Microsoft® Windows® 10 Enterprise Microsoft® Windows® 10 Pro Microsoft® Windows® 10 IoT Enterprise 2016 LTSB*2 Microsoft® Windows® 10 IoT Enterprise 2016 LTSB*2 Microsoft® Windows® 8.1 Enterprise Microsoft® Windows® 8.1 Pro Microsoft® Windows® 8.1 Pro Microsoft® Windows® 8 Enterprise Microsoft® Windows® 8 Pro Microsoft® Windows® 8 Pro Microsoft® Windows® 7 Enterprise Microsoft® Windows® 7 Enterprise Microsoft® Windows® 7 Professional Microsoft® Windows® 7 Professional Microsoft® Windows® 7 Starter		
CPU (Recommended)	Windows® 11 Other than Windows® 11	2-core or higher 64-bit compatible processor or System on a Chip (SoC) Desktop PC: Intel® Celeron® processor 2.8 GHz or higher		
Memory (Recommended) Other than Windows® 11		Laptop: Intel® Pentium® M processor 1.7 GHz or higher 4 GB or more (64-bit OS) 1 GB or more (32-bit OS) 2 GB or more (64-bit OS)		
Available HD space		1.5 GB or more		
Display		Resolution: 1024 x 768 or more, Must be capable of high color (16-bit) display Connectable with the PCs listed above		
USB cable		LEC-MR-J3USB		
Ethernet cable		Cable type: Category 5e or higher, (Double shielded/STP) Straight cable Standards: IEEE 802.3 (1000BASE-T) or ANSI/TIA/EIA-568-B (Category 5e) Connector: Shielded RJ-45		

^{*1} On some PCs, this software may not run properly.

Setup Software Compatible Drivers

0	Setup software					
Compatible driver	MR Configurator™	MR Configurator2™				
unver	LEC-MR-SETUP221□	LEC-MRC2□				
LECSA	0	0				
LECSB2-T□	_	0				
LECSC2-T□	_	0				
LECSS2-T□	_	0				
LECSN□-T□	_	0				



^{*2} Only the 64-bit edition is supported.

^{*3} Surrogate pair characters and environment-dependent characters cannot be used.

LECSA/LECS□-T Series

Options

USB cable (3 m)

(LECSA, LECS□-T common)

LEC-MR-J3USB

MR-J3USBCBL3M manufactured by Mitsubishi Electric Corporation
 Weight: 140 g

Cable for connecting the PC and driver when using the setup software (MR Configurator2[™])

Do not use any cable other than this cable.

STO cable (3 m)


(Only for LECSB2-T \square , LECSN \square -T \square and LECSS2-T \square)

LEC-MR-D05UDL3M

* MR-D05UDL3M-B manufactured by Mitsubishi Electric Corporation

Cable for connecting the driver and device, when using the safety function

Do not use any cable other than this cable.



Weight: 500 g


Battery

Replacement batteries must be purchased from Mitsubishi Electric Corporation.

Part no.: MR-J3BAT manufactured by Mitsubishi Electric Corporation

Battery for replacement

Absolute position data is maintained by installing the battery to the driver.




Weight: 30 g

* The MR-J3BAT is a single battery that uses a lithium metal battery ER6V. When transporting lithium metal batteries and devices with built-in lithium metal batteries by a method subject to UN regulations, it is necessary to apply measures according to the regulations stipulated in the United Nations Recommendations on the Transport of Dangerous Goods, the Technical Instructions (ICAO-TI) of the International Civil Aviation Organization (ICAO), and the International Maritime Dangerous Goods Code (IMDG CODE) of the International Maritime Organization (IMO). If a customer is to transport such products, it is necessary for them to confirm the latest regulations, or the laws and regulations of the country of transport, on their own in order to apply the proper measures.

Part no.: MR-BAT6V1SET manufactured by Mitsubishi Electric Corporation

Battery for replacement


Absolute position data is maintained by installing the battery to the driver.



Part no.: MR-BAT6V1SET-A manufactured by Mitsubishi Electric Corporation

Battery for replacement

Absolute position data is maintained by installing the battery to the driver.



 The MR-BAT6V1SET and MR-BAT6V1SET-A are assembled batteries that use lithium metal battery 2CR17335A.

When transporting lithium metal batteries and devices with built-in lithium metal batteries by a method subject to UN regulations, it is necessary to apply measures according to the regulations stipulated in the United Nations Recommendations on the Transport of Dangerous Goods, the Technical Instructions (ICAO-TI) of the International Civil Aviation Organization (ICAO), and the International Maritime Dangerous Goods Code (IMDG CODE) of the International Maritime Organization (IMO). If a customer is transporting products such as shown above, it is necessary to confirm the latest regulations, or the laws and regulations of the country of transport on your own, in order to apply the proper measures.

Battery Types and Compatible Drivers

Compatible driver	Battery type					
Compatible unver	MR-J3BAT	MR-BAT6V1SET	MR-BAT6V1SET-A			
LECSB□-T□	_	0	_			
LECSC□-T□	0	_	_			
LECSS□-T□	_	0	_			
LECSN□-T□	_	_	0			



■■ MECHATROLINK Compatible

AC Servo Motor Driver Absolute Type

LECYM/LECYU Series



(MECHATROLINK-III Type)






1343 and onward



How to Order

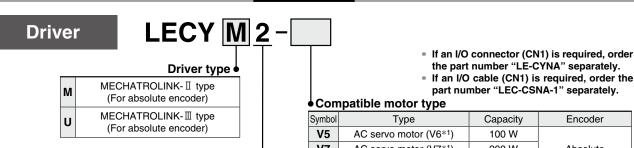


Power supply voltage 200 to 230 VAC, 50/60 Hz

Encoder Capacity 100 W ۷7 AC servo motor (V7*1) 200 W Absolute **V8** AC servo motor (V8*1) 400 W

Dimensions

MECHATROLINK-II type LECYM2-V□

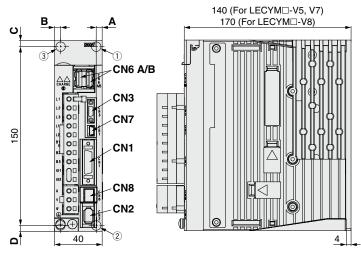


Connector name	Description
CN1	I/O signal connector
CN2	Encoder connector
CN3*1	Digital operator connector
CN6A	MECHATROLINK- II communication connector
CN6B	MECHATROLINK- II communication connector
CN7	PC connector
CN8	Safety connector

Digital operator is JUSP-OP05A-1-E manufactured by YASKAWA Electric Corporation. When using the digital operator, it should be provided by the customer.

Motor	Hole	Mou	nting c	dimens	sions	Mounting
capacity	position	Α	В	С	D	hole
V5 (100 W)	12	5	_	5	5	
V7 (200 W)	12	5	_	5	5	ø5
V8 (400 W)	23	5	5	5	5	

The mounting hole position varies depending on the motor capacity

LECYU2-V□

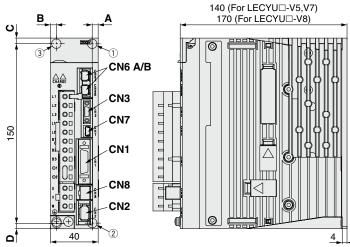

Connector name	Description			
CN1	I/O signal connector			
CN2	Encoder connector			
CN3*1	Digital operator connector			
CN6A	MECHATROLINK-Ⅲ communication connector			
CN6B	MECHATROLINK-II communication connector			
CN7	PC connector			
CN8	Safety connector			

*1 Digital operator is JUSP-OP05A-1-E manufactured by YASKAWA Electric Corporation.
When using the digital operator, it should be provided by the customer.

Motor	Hole	Mou	nting o	dimens	sions	Mounting
capacity	position	Α	В	С	D	hole
V5 (100 W)	12	5	_	5	5	
V7 (200 W)	12	5	—	5	5	ø5
V8 (400 W)	23	5	5	5	5	

The mounting hole position varies depending on the motor capacity.



^{*1} The symbol shows the motor type (actuator).

LECY^M Series

Specifications

MECHATROLINK-II Type

Model			LECYM2-V5	LECYM2-V7	LECYM2-V8	
Rated power supply capacity [kVA]			0.3	0.6	1	
Max. power supply capacity [kVA]			1.05	2.1	3.5	
Compatible motor cap	acity [W]		100	200	400	
Compatible encoder			Absolute	e 20-bit encoder (Resolution: 1048	576 p/rev)	
Main circuit power	Power voltage [\	/]*2	TI	Three phase 200 to 230 VAC (50/60 Hz)		
supply	Allowable voltage fluc	-	Three phase 170 to 253 VAC			
	Power voltage [\		Si	ingle phase 200 to 230 VAC (50/60	Hz)	
Control power supply	Allowable voltage flu			Single phase 170 to 253 VAC	· · -/	
Power supply capacity			0.91	1.6	2.8	
nput circuit	(at ratea output) [~.]		NPN (Sink circuit)/PNP (Source circ		
Parallel input (7 inputs)	Number of optional allocations	7 inputs	[Can be allocated by setting the Forward external torque limes.]	OT), reverse run prohibited (N-OT)	,	
	Number of fixed allocations	1 output	· Servo alarm (ALM)			
Parallel output (4 outputs)	Number of optional allocations	3 outputs	[Initial allocation] Lock (/BK) [Can be allocated by setting to Positioning completion (/CC) Speed limit detection (/NLT) Speed coincidence detection Rotation detection (/TGON) Warning (/WARN) Servo ready (/S-RDY) Near (/NEAR)	DIN)) on (/V-CMP)		
	Communication	protocol				
	Station address		41H to 5FH			
MECHATROLINK	Transmission sp		10 Mbps			
communication	Transmission cy		250) μs, 0.5 ms to 4 ms (Multiples of 0	5 ms)	
	Number of transmis	ssion bytes		17 bytes, 32 bytes		
	Max. number of	stations	30			
	Cable length		Overall cable length: 50 m or less, Cable length between the stations: 0.5 m or more			
	Control method		Position, speed, or torque control with MECHATROLINK- ${\mathbb I}$ communication			
Command method	Command input		MECHATROLINK- I command (Motion, data setting, monitoring, or adjustment)			
	Gain adjustment	!	Tuning-less/Advanced auto tuning/One-parameter tuning			
	Communication	setting	USB communication, RS-422 communication			
	Torque limit		Internal torque limit,	external torque limit, and torque lin	nit by analog command	
unction	Encoder output			Phase A, B, Z: Line driver output		
	Emergency stop		CN8 Safety function			
	Overtravel		Dynamic brake stop, deceleration to a stop, or free run to a stop at P-OT or N-OT			
Alarm			Alarm signal, MECHATROLINK- II command			
perating temperature	range [°C]		0 to 55 (No freezing)			
perating humidity rai			90 or less (No condensation)			
Storage temperature ra	-		-20 to 85 (No freezing)			
Storage humidity rang				90 or less (No condensation)		
inclosure				IP10		
nsulation registance [Insulation resistance [MΩ]			10 MΩ (500 VDC)		
	14122]			· · · · · · · · · · · · · · · · · · ·		
nsulation resistance [Safety function Safety standards*1	141221		FN ISO 13849-1 Categor	STO (IEC 61800-5-2) y 3 PL d, IEC 61508 SIL2, IEC 620	n61 SII CI 2 IFC 61800-5-2	

^{*1} Refer to the LECYM operation manual for details. *2 Three phase 400 VAC is not supported.



Specifications

MECHATROLINK-Ⅲ Type


NEOFF THOUSANT II TY	Model		LECYU2-V5	LECYU2-V7	LECYU2-V8	
Rated power supply ca	pacity [kVA]		0.3	0.6	1	
Max. power supply cap	acity [kVA]		1.05	2.1	3.5	
Compatible motor capacity [W]			100	200	400	
Compatible encoder	,			20-bit encoder (Resolution: 1048		
Main circuit power Power voltage [V]*2				ree phase 200 to 230 VAC (50/60	· ' ' · · · · · · · · · · · · · · · · ·	
supply	Allowable voltage fluc	-		Three phase 170 to 253 VAC	7112)	
	Power voltage [\		Sin	gle phase 200 to 230 VAC (50/60) H ₇)	
Control power supply	Allowable voltage flu	-	Sili	Single phase 170 to 253 VAC	7112)	
Daway awantu aanaaitu			0.01	, , , , , , , , , , , , , , , , , , , 	0.0	
Power supply capacity	(at rated output) [Aj	0.91	1.6 PN (Sink circuit)/PNP (Source circ	2.8	
Parallel input (7 inputs) Number of optional allocations Number of inputs			[Initial allocation] Homing deceleration switch (External latch (/EXT 1 to 3) Forward run prohibited (P-OT) [Can be allocated by setting the Forward external torque limit	//DEC) (), reverse run prohibited (N-OT)	limit (/N-CL)	
	Number of fixed allocations	1 output	· Servo alarm (ALM)			
Parallel output (4 outputs)	Number of optional allocations	3 outputs	[Initial allocation] Lock (/BK) [Can be allocated by setting the parameters] Positioning completion (/COIN) Speed limit detection (/VLT) Speed coincidence detection (/V-CMP) Rotation detection (/TGON) Warning (/WARN) Servo ready (/S-RDY) Near (/NEAR) Torque limit detection (/CLT) Signal allocations can be performed, and positive and negative logic can be changed.			
	Communication	protocol		MECHATROLINK-Ⅲ		
	Station address			03H to EFH		
	Transmission sp	eed		100 Mbps		
MECHATROLINK	Transmission cy		125 μs, 250 μs, 500 μs, 750 μs, 1 ms to 4 ms (Multiples of 0.5 ms)			
communication	Number of transmis					
			62			
	Max. number of	stations				
	Cable length		Cable length between the stations: 0.5 m or more, 75 m or less			
Command method	Control method Command input		Position, speed, or torque control with MECHATROLINK-II communication MECHATROLINK-II command (Motion, data setting, monitoring, or adjustment)			
	Command input		(Motion	MECHATROLINK-Ⅲ command n, data setting, monitoring, or adju		
			·	n, data setting, monitoring, or adj	ustment)	
	Gain adjustment	:	Tuning-less	n, data setting, monitoring, or adj s/Advanced auto tuning/One-para	ustment) Imeter tuning	
	Gain adjustment	:	Tuning-less USB (n, data setting, monitoring, or adj n/Advanced auto tuning/One-para communication, RS-422 commun	ustment) umeter tuning nication	
Junction	Gain adjustment Communication Torque limit	:	Tuning-less USB (n, data setting, monitoring, or adju s/Advanced auto tuning/One-para communication, RS-422 commur xternal torque limit, and torque lin	ustment) umeter tuning nication nit by analog command	
- unction	Gain adjustment Communication Torque limit Encoder output	setting	Tuning-less USB (n, data setting, monitoring, or adjusted auto tuning/One-para communication, RS-422 communication, RS-421 communication, RS-421 communication, and torque limit, and torque limit, and torque limit, and torque output	ustment) umeter tuning nication nit by analog command	
-unction	Gain adjustment Communication Torque limit Encoder output Emergency stop	setting	Tuning-less USB (Internal torque limit, e.	n, data setting, monitoring, or adjusted auto tuning/One-para communication, RS-422 communication, RS-421 communication, RS-422 communication, RS-422 communication, RS-422 communication, RS-422 communication, RS-422 comm	ustment) umeter tuning nication mit by analog command t	
unction	Gain adjustment Communication Torque limit Encoder output Emergency stop Overtravel	setting	Tuning-less USB (Internal torque limit, e.	n, data setting, monitoring, or adjusted auto tuning/One-paracommunication, RS-422 communication, RS-422 communication, RS-422 communication, RS-422 communication, RS-422 communication, RS-422 communication, RS-422 comm	ustment) umeter tuning nication mit by analog command t o a stop at P-OT or N-OT	
	Gain adjustment Communication Torque limit Encoder output Emergency stop Overtravel Alarm	setting	Tuning-less USB (Internal torque limit, e.	n, data setting, monitoring, or adjusted auto tuning/One-paracommunication, RS-422 communication, RS-422 commu	ustment) umeter tuning nication mit by analog command t o a stop at P-OT or N-OT	
Operating temperature	Gain adjustment Communication Torque limit Encoder output Emergency stop Overtravel Alarm	setting	Tuning-less USB (Internal torque limit, e.	n, data setting, monitoring, or adjust/Advanced auto tuning/One-paracommunication, RS-422 communication, RS-422 communication, RS-422 communication declaration to a stop, or free run to a signal, MECHATROLINK-II con 0 to 55 (No freezing)	ustment) umeter tuning nication mit by analog command t o a stop at P-OT or N-OT	
Operating temperature	Gain adjustment Communication Torque limit Encoder output Emergency stop Overtravel Alarm Trange [°C]	setting	Tuning-less USB (Internal torque limit, e.	n, data setting, monitoring, or adjusted auto tuning/One-paracommunication, RS-422 communication, RS-422 commu	ustment) umeter tuning nication mit by analog command t o a stop at P-OT or N-OT	
Operating temperature	Gain adjustment Communication Torque limit Encoder output Emergency stop Overtravel Alarm Trange [°C]	setting	Tuning-less USB (Internal torque limit, e.	n, data setting, monitoring, or adjust/Advanced auto tuning/One-paracommunication, RS-422 communication, RS-422 communication, RS-422 communication declaration to a stop, or free run to a signal, MECHATROLINK-II con 0 to 55 (No freezing)	ustment) umeter tuning nication mit by analog command t o a stop at P-OT or N-OT	
Operating temperature Operating humidity ran Storage temperature ra	Gain adjustment Communication Torque limit Encoder output Emergency stop Overtravel Alarm range [°C] ange [%RH]	setting	Tuning-less USB (Internal torque limit, e.	n, data setting, monitoring, or adji //Advanced auto tuning/One-para communication, RS-422 commun xternal torque limit, and torque lim Phase A, B, Z: Line driver outpu CN8 Safety function sceleration to a stop, or free run to a signal, MECHATROLINK-II con 0 to 55 (No freezing) 90 or less (No condensation)	ustment) umeter tuning nication mit by analog command t o a stop at P-OT or N-OT	
Operating temperature Operating humidity rar Storage temperature ra Storage humidity rang	Gain adjustment Communication Torque limit Encoder output Emergency stop Overtravel Alarm range [°C] ange [%RH]	setting	Tuning-less USB (Internal torque limit, e.	n, data setting, monitoring, or adjust/Advanced auto tuning/One-paracommunication, RS-422 communication, RS-422 communication, RS-422 communication, RS-422 communication, RS-422 communication, RS-422 communication, and torque limit, and torque li	ustment) umeter tuning nication mit by analog command t o a stop at P-OT or N-OT	
Operating temperature Operating humidity rar Storage temperature ra Storage humidity range	Gain adjustment Communication Torque limit Encoder output Emergency stop Overtravel Alarm range [°C] nge [%RH] ange [°C]	setting	Tuning-less USB (Internal torque limit, e.	n, data setting, monitoring, or adjust/Advanced auto tuning/One-para communication, RS-422 communication, RS-422 communication, RS-422 communication, RS-422 communication, RS-422 communication, RS-422 communication, and torque limit, and torque limit, and torque limit. Phase A, B, Z: Line driver output CN8 Safety function celeration to a stop, or free run to a signal, MECHATROLINK-II communication of the signal, MECHATROLINK-II communication of the signal, MECHATROLINK-II communication of the signal o	ustment) umeter tuning nication mit by analog command t o a stop at P-OT or N-OT	
Operating temperature Operating humidity rar Storage temperature ra Storage humidity rang Enclosure nsulation resistance [l	Gain adjustment Communication Torque limit Encoder output Emergency stop Overtravel Alarm range [°C] nge [%RH] ange [°C]	setting	Tuning-less USB (Internal torque limit, e.	n, data setting, monitoring, or adjust/Advanced auto tuning/One-paracommunication, RS-422 communication, RS-422 communication, RS-422 communication, RS-422 communication, RS-422 communication, RS-422 communication, and torque limit, and torque li	ustment) umeter tuning nication mit by analog command t o a stop at P-OT or N-OT	
Function Operating temperature Operating humidity rar Storage temperature ra Storage humidity range Enclosure Insulation resistance [I Safety function Safety standards*1	Gain adjustment Communication Torque limit Encoder output Emergency stop Overtravel Alarm range [°C] nge [%RH] ange [°C]	setting	Tuning-less USB of Internal torque limit, es Dynamic brake stop, de Alarm	n, data setting, monitoring, or adjust/Advanced auto tuning/One-paracommunication, RS-422 communication, RS-422 communication, RS-422 communication, RS-422 communication, RS-422 communication, RS-422 communication, and torque limit, and torque limit. CN8 Safety function as Safety function of the safety function of	ustment) umeter tuning nication mit by analog command t o a stop at P-OT or N-OT mmand	

^{*1} Refer to the LECYU operation manual for details. *2 Three phase 400 VAC is not supported.



Power Supply Wiring Example: LECY□

■Three phase 200 V LECYM2-□ LECYU2-□

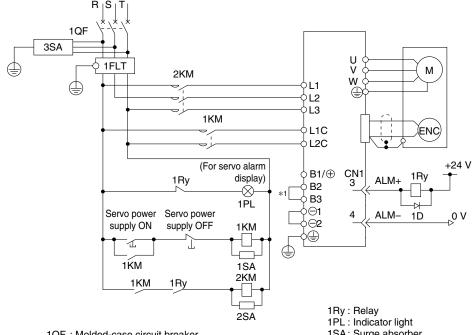

1QF: Molded-case circuit breaker

1FLT: Noise filter

1KM: Magnetic contactor (for control power supply) 2KM: Magnetic contactor (for main circuit power supply) 1SA: Surge absorber 2SA: Surge absorber 3SA: Surge absorber 1D : Flywheel diode

- *1 For the LECY 2-V5, LECY 2-V7, and LECY 2-V8, terminals B2 and B3 are not short-circuited. Do not short-circuit these terminals.
- * Three phase 400 VAC is not supported.

Main Circuit Power Supply Connector * Accessory


Terminal name	Function	Details
L1	Main circuit power	Connect the main circuit power supply.
L2	•	Single phase 200 to 230 VAC, 50/60 Hz Connection terminal: L1, L2
L3	supply	Three phase 200 to 230 VAC, 50/60 Hz Connection terminal: L1, L2, L3
L1C	0	Connect the control power supply.
L2C	Control power supply	Single phase 200 to 230 VAC, 50/60 Hz Connection terminal: L1C, L2C
B1/⊕	External regenerative	When the regenerative resistor is required, connect it
B2	resistor	between terminals B1(+) and B2.
В3	connection terminal	between terminals bit and b2.
⊝1	Main circuit negative	(⊃1 and (⊃)2 are connected at shipment.
⊝2	terminal	Tand 2 are connected at snipment.

Motor Connector * Accessory


Terminal name	Function	Details			
U	Servo motor power (U)				
V	Servo motor power (V)	Connect to motor cable (U, V, W).			
W	Servo motor power (W)				

Power Supply Wire Specifications

Item	Specifications
Applicable	L1, L2, L3, L1C, L2C
wire size	Single wire, Twisted wire, AWG14 (2.0 mm²)
Stripped wire length	8 to 9 mm

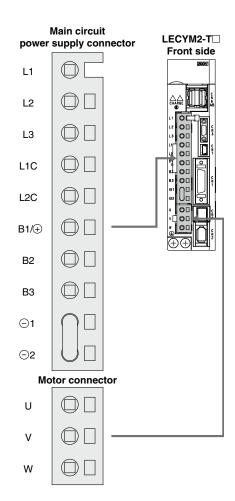

Control Signal Wiring Example: LECYM

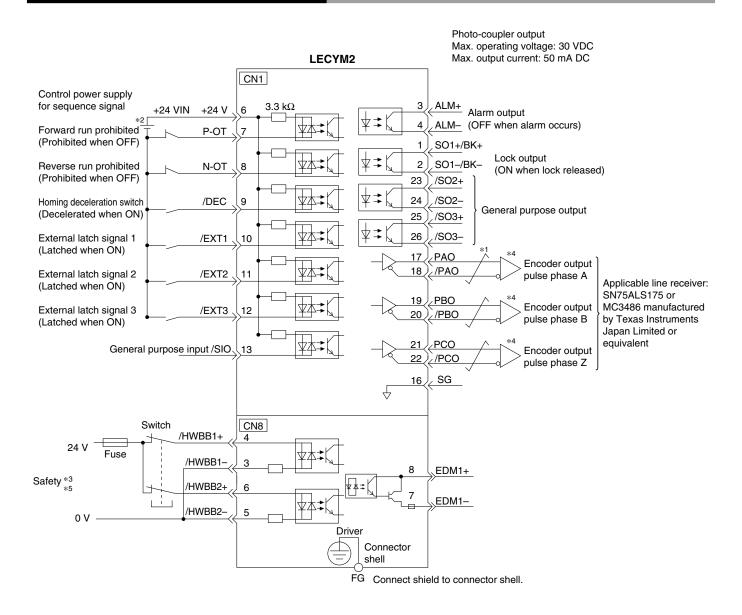

^{*1 \$\}neq\$ shows twisted-pair wires.

^{*2} The 24 VDC power supply is not included. Use a 24 VDC power supply with double insulation or reinforced insulation.

^{*3} When using the safety function, a safety function device must be connected to the wiring that is necessary to activate the safety function. Otherwise, the servo motor is not turned ON. When not using the safety function, use the driver with the Safety Jumper Connector (provided as an accessory) inserted into the CN8.


^{*4} Always use line receivers to receive the output signals.

^{**} The functions allocated to the input signals /DEC, P-OT, N-OT, /EXT1, /EXT2, and /EXT3, and the output signals /SO1, /SO2, and /SO3 can be changed by setting the parameters.

^{*5} It is a safety function equivalent to the STO function (IEC 61800-5-2) using the hard wire base block function (HWBB).

LECY^M Series

Control Signal Wiring Example: LECYU

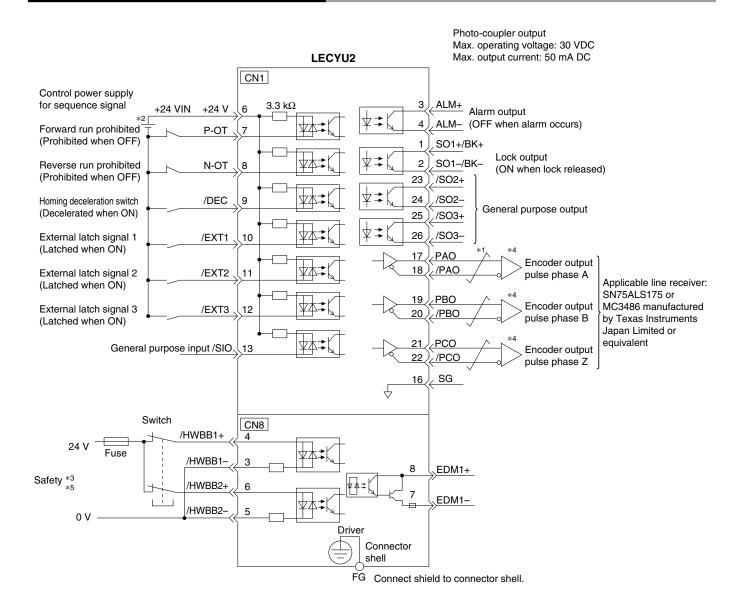

^{*1 \$\}neq\$ shows twisted-pair wires.

^{*2} The 24 VDC power supply is not included. Use a 24 VDC power supply with double insulation or reinforced insulation.

^{*3} When using the safety function, a safety function device must be connected to the wiring that is necessary to activate the safety function. Otherwise, the servo motor is not turned ON. When not using the safety function, use the driver with the Safety Jumper Connector (provided as an accessory) inserted into the CN8.


^{*4} Always use line receivers to receive the output signals.

^{**} The functions allocated to the input signals /DEC, P-OT, N-OT, /EXT1, /EXT2, and /EXT3, and the output signals /SO1, /SO2, and /SO3 can be changed by setting the parameters.

^{*5} It is a safety function equivalent to the STO function (IEC 61800-5-2) using the hard wire base block function (HWBB).


Options

Motor cable, Motor cable for lock option, Encoder cable (LECYM/LECYU common)

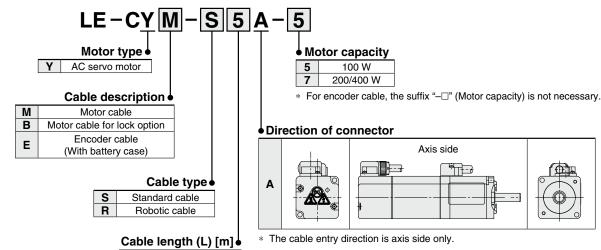

_

LE-CYM-□□A-□: Motor cable




5


A C 5 10

20

LE-CYB-□□A-□: Motor cable for lock option

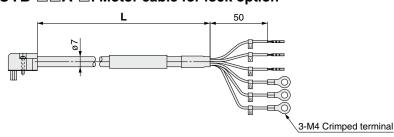

LE-CYE-□□A: Encoder cable

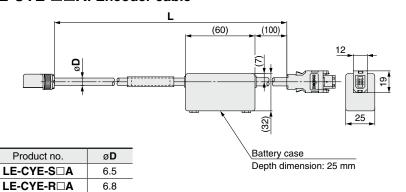

Weight

weight					
Product no.	Length [m]	Weight [g]	Note		
LE-CYM-S3A-5	3	250			
LE-CYM-S5A-5	5	390	100 W		
LE-CYM-SAA-5	10	750	100 00		
LE-CYM-SCA-5	20	1500			
LE-CYM-S3A-7	3	250			
LE-CYM-S5A-7	5	390	200/		
LE-CYM-SAA-7	10	750	400 W		
LE-CYM-SCA-7	20	1500			
LE-CYM-R3A-5	3	220			
LE-CYM-R5A-5	5	350	100 W		
LE-CYM-RAA-5	10	670	100 00		
LE-CYM-RCA-5	20	1300			
LE-CYM-R3A-7	3	220			
LE-CYM-R5A-7	5	350	200/		
LE-CYM-RAA-7	10	670	400 W		
LE-CYM-RCA-7	20	1300			

Weight

<u> </u>			
Product no.	Length [m]	Weight [g]	Note
LE-CYB-S3A-5	3	240	
LE-CYB-S5A-5	5	390	100 W
LE-CYB-SAA-5	10	750	100 00
LE-CYB-SCA-5	20	1490	
LE-CYB-S3A-7	3	240	
LE-CYB-S5A-7	5	390	200/
LE-CYB-SAA-7	10	750	400 W
LE-CYB-SCA-7	20	1490	
LE-CYB-R3A-5	3	220	
LE-CYB-R5A-5	5	350	100 W
LE-CYB-RAA-5	10	670	100 W
LE-CYB-RCA-5	20	1300	
LE-CYB-R3A-7	3	220	
LE-CYB-R5A-7	5	350	200/
LE-CYB-RAA-7	10	670	400 W
LE-CYB-RCA-7	20	1300	

Weight

Product no.	Length [m]	Weight [g]
LE-CYE-S3A	3	230
LE-CYE-S5A	5	360
LE-CYE-SAA	10	680
LE-CYE-SCA	20	1250
LE-CYE-R3A	3	220
LE-CYE-R5A	5	330
LE-CYE-RAA	10	660
LE-CYE-RCA	20	1240


^{*} LE-CYM-S□A-□ is JZSP-CSM0□-□□-E manufactured by YASKAWA CONTROLS CO., LTD. LE-CYB-S□A-□ is JZSP-CSM1□-□□-E manufactured by YASKAWA CONTROLS CO., LTD. LE-CYE-S□A is JZSP-CSP05-□□-E manufactured by YASKAWA CONTROLS CO., LTD.

LE-CYM-R \square A- \square is JZSP-CSM2 \square - \square -E manufactured by YASKAWA CONTROLS CO., LTD. LE-CYB-R \square A- \square is JZSP-CSM3 \square - \square -E manufactured by YASKAWA CONTROLS CO., LTD. LE-CYE-R \square A is JZSP-CSP25- \square -E manufactured by YASKAWA CONTROLS CO., LTD.

LECY^M Series

Options

I/O connector (Without cable, Connector only)







Weight

Product no.	Weight [g]
LE-CYNA	25


- * LE-CYNA: 10126-3000PE (connector)/10326-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent
- * Conductor size: AWG24 to 30

I/O cable



Weight

Product no.	Weight [g]	
LEC-CSNA-1	303	

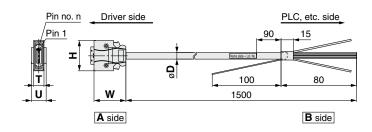

- LEC-CSNA-1: 10126-3000PE (connector)/10326-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent
- * Conductor size: AWG24

Wiring

LEC-CSNA-1: Pin nos. 1 to 26

	nector no.	Pair no. of wire	Insulation color	Dot mark	Dot color
	1	1	Orongo		Red
	2		Orange		Black
	3	2	Light		Red
	4	2	gray		Black
A side	5	3	White		Red
8	6	3	vviile		Black
	7	4	Yellow		Red
	8	4	reliow		Black
	9	5	Pink		Red
	10	3	FILIK		Black

Connector pin no.		Pair no. of wire	Insulation color	Dot mark	Dot color
	11	6	Orongo		Red
	12	0	Orange		Black
	13	7	Light		Red
	14	_ ′	gray		Black
ide	15	8	White		Red
A side	16	0	vviile		Black
	17	9	Yellow		Red
	18	9	renow		Black
	19	10) Pink		Red
	20	10	FIIIK		Black

			Dot mark	Dot
n no.	of wire	color	Dot mark	color
21	44	Orongo		Red
22	11	Orange		Black
23	10	Light		Red
24	12	gray		Black
25	10	\\/hito		Red
26	13	vville		Black
	21 22 23 24 25	11 22 11 22 23 24 25 13	21 22 11 Orange 23 12 Light 24 12 White	11 Orange 23 12 Light gray 25 13 White


Cable O.D.

Dimensions/Pin No.

Cable O.D.				
Product no.	øD			
LEC-CSNA-1	11.1			


Difficusions/1 in No.					
Product no.	W	Н	Т	U	Pin no. n
LEC-CSNA-1	39	37.2	12.7	14	14

Options

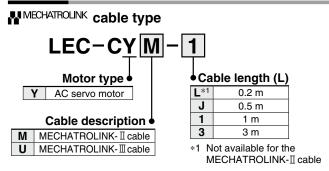

- * LEC-CYM-□ is JEPMC-W6002-□□-E manufactured by YASKAWA CONTROLS CO., LTD.
- * LEC-CYU- is JEPMC-W6012- = manufactured by YASKAWA CONTROLS CO., LTD.


₩ MECHATROLINK-II cable



Weight

Product no.	Length [m]	Weight [g]
LEC-CYM-J	0.5	50
LEC-CYM-1	1	80
LEC-CYM-3	3	200

™MECHATROLINK-**II** cable




Weight

Product no.	Length [m]	Weight [g]
LEC-CYU-L	0.2	21
LEC-CYU-J	0.5	41
LEC-CYU-1	1	75
LEC-CYU-3	3	205

Terminating connector for ₩MECHATROLINK-II

LEC-CYRM

* LEC-CYRM is JEPMC-W6022-E manufactured by YASKAWA CONTROLS CO., LTD.




Weight: 10 g

LECY M Series

Options





LECYM2 LECYU2

Setup software (SigmaWin+™) (LECYM/LECYU common) * Please download the SigmaWin+™ via our website.

Please download the SigmaWin+'™ via our website.

SigmaWin+™ is a registered trademark or trademark of YASKAWA Electric Corporation.

Adjustment, waveform display, parameter reading/writing, and test operations can be performed on a PC. Compatible PCs

When using the setup software (SigmaWin+™), use an IBM PC/AT compatible PC that meets the following operating conditions.

Hardware Requirements

	Equipment	Setup software (SigmaWin+™) Ver. 5	Setup software (SigmaWin+™) Ver. 7
*1, 2, 3, 4 PC	os	Windows® XP*5, Windows Vista®, Windows® 7 (32-bit/64-bit)	Compatible with 64-bit OS · Windows 11, Windows 10, Windows 8.1*7, Windows 7 SP1*8 Compatible with 32-bit OS · Windows 10, Windows 8.1*7, Windows 7 SP1*8
	Available HD space	350 MB or more (When the software is installed, 400 MB or more is recommended.	500 MB or more
	Communication interface	Uses the USB port	
Display		XVGA monitor (1024 x 768 or more, used with small font) 256 color or more (65536 color or more is recommended) Connectable with the PCs listed above	Resolution: 1280 x 800 or more (Recommended) Connectable with the PCs listed above
Keyboar	rd	Connectable with the PCs listed above	
Mouse		Connectable with the PCs listed above	
Printer		Connectable with the PCs listed above	
USB cat	ble	LEC-JZ-CVUSB*6	
Other Adobe Reader Ver. 5.0 or higher (* Excludes Ver. 6.0) —		_	

- *1 Windows, Windows Vista®, Windows® 7, Windows® 8.1, Windows® 10, and Windows® 11 are registered trademarks of Microsoft Corporation in the United States and/or other countries.
- *2 On some PCs, this software may not run properly.
- *3 Not compatible with 64-bit Windows® XP and 64-bit Windows Vista®
- *4 For Windows® XP, install and run the software as an administrator.
- *5 For PCs that have HotfixQ328310 installed, installation of the software is likely to fail. In such cases, install HotfixQ329623 instead.
- *6 Order a USB cable separately.
- *7 WindowsUpdate KB2919442, KB2919355, and KB2999226 are required.
- *8 WindowsUpdate KB2999226 is required.


Battery (LECYM/LECYU common)

Replacement batteries must be purchased from YASKAWA Electric Corporation.

Part no.: JZSP-BA01 manufactured by YASKAWA Electric Corporation

Battery for replacement


Absolute position data is maintained by installing the battery to the battery case of the encoder cable.



USB cable (2.5 m)

LEC-JZ-CVUSB

* JZSP-CVS06-02-E manufactured by YASKAWA CONTROLS CO., LTD. Cable for connecting the PC and driver when using the setup software (SigmaWin+ $^{\text{TM}}$) Do not use any cable other than this cable.



* The JZSP-BA01 is a single battery that uses a lithium metal battery ER3V.


When transporting lithium metal batteries and devices with built-in lithium metal batteries by a method subject to UN regulations, it is necessary to apply measures according to the regulations stipulated in the United Nations Recommendations on the Transport of Dangerous Goods, the Technical Instructions (ICAO-TI) of the International Civil Aviation Organization (ICAO), and the International Maritime Dangerous Goods Code (IMDG CODE) of the International Maritime Organization (IMO). If a customer is to transport such products, it is necessary for them to confirm the latest regulations, or the laws and regulations of the country of transport, on their own in order to apply the proper measures.

Cable for safety function device (3 m)

LEC-JZ-CVSAF

* JZSP-CVH03-03-E manufactured by YASKAWA CONTROLS CO., LTD.

Cable for connecting the driver and device when using the safety function Do not use any cable other than this cable.







LECSA/LECS□-**T/LECY**□ Series Specific Product Precautions 1

Be sure to read this before handling the products.

Refer to page 1351 for safety instructions and pages 1352 to 1357 for electric actuator precautions.

Design / Selection

⚠ Warning

1. Be sure to apply the specified voltage.

Otherwise, malfunction or breakage may occur. If the applied voltage is lower than the specified voltage, it is possible that the load will not be able to be moved due to an internal voltage drop of the driver. Please check the operating voltage before use.

2. Do not operate the product beyond the specifications.

Otherwise, a fire, malfunction, or actuator damage may result. Please check the specifications before use.

3. Install an emergency stop circuit.

Please install an emergency stop outside of the enclosure so that the system operation can be stopped immediately and the power supply can be intercepted.

- 4. In order to prevent any damage caused by the breakdown or malfunction of the driver and its peripheral devices, a backup system should be established in advance by giving a multiple-layered structure or a failsafe design to the equipment, etc.
- 5. If the danger of human injury is expected due to abnormal heat generation, smoking, ignition, etc., of the driver and its peripheral devices, cut off the power supply of the product and the system immediately.
- 6. The parameters of the driver are set to initial values. Please change the parameters according to the specifications of the customer's equipment before use. Refer to the operation manual for parameter details.

Handling

Marning

 Do not touch the inside of the driver and its peripheral devices.

Doing so may cause an electric shock or damage to the driver.

2. Do not perform the operation or setting of the product with wet hands.

Doing so may cause an electric shock.

3. Products with damage or those missing any components should not be used.

An electric shock, fire, or injury may result.

4. Use only the specified combination between the electric actuator and the driver.

Failure to do so may cause damage to the actuator or the driver.

Be careful not to be hit by workpieces while the actuator is moving.

It may cause an injury.

6. Do not connect the power supply or power on the product before confirming the area to which the workpiece moves is safe.

The movement of the workpiece may cause an accident.

- 7. Do not touch the product when it is energized and for some time after the power has been disconnected, as it is very hot. Doing so may lead to a burn due to the high temperature.
- 8. Before installation, wiring, and maintenance, the voltage should be checked with a tester 5 minutes after the power supply has been turned off.

Otherwise, an electric shock, fire, or injury may result.

Handling

⚠ Warning

Static electricity may cause a malfunction or break the driver. Do not touch the driver while power is supplied.

When touching the driver for maintenance, take sufficient measures to eliminate static electricity.

10. Do not use the product in an area where dust, powder dust, water, chemicals, or oil is in the air.

It will cause failure or malfunction.

11. Do not use the product in an area where a magnetic field is generated.

It will cause failure or malfunction.

- Do not install the product in an environment containing flammable gas, explosive gas, or corrosive gas. It could lead to fire, explosion, or corrosion.
- Radiant heat from strong heat sources, such as a furnace, direct sunlight, etc., should not be applied to the product.

It will cause failure of the driver or its peripheral devices.

14. Do not use the product in an environment subject to a temperature cycle.

It will cause failure of the driver or its peripheral devices.

15. Do not use the product in a place where surges are generated.

When there are units that generate a large amount of surge around the product (e.g. solenoid type lifters, high-frequency induction furnaces, motors, etc.), this may cause deterioration or damage to the product's internal circuit. Avoid sources of surge generation and crossed lines.

16. Do not install the product in an environment under the effect of vibrations and impacts.

It will cause failure or malfunction.

17. When a surge-generating load, such as a relay or solenoid valve, is driven directly, use a product that incorporates a surge absorption element.

Installation

Marning

 Install the driver and its peripheral devices on a fireproof material.

Direct installation on or near a flammable material may cause a fire.

2. Do not install the product in a place subject to vibrations and impacts.

It will cause failure or malfunction.

- The driver should be mounted on a vertical wall in a vertical direction. Also, be sure not to cover the driver's suction/exhaust ports.
- 4. Install the driver and its peripheral devices on a flat surface.

If the mounting surface is distorted or uneven, an unacceptable force may be added to the housing, etc., causing problems.





LECSA/LECS□-T/LECY□ Series Specific Product Precautions 2

Be sure to read this before handling the products.

Refer to page 1351 for safety instructions and pages 1352 to 1357 for electric actuator precautions.

Power Supply

⚠ Caution

1. Use a power supply that has low noise between lines and between the power and ground.

In cases where noise is high, an isolation transformer should be used.

To prevent lightning surges, appropriate measures should be taken. Ground the surge absorber for lightning separately from the grounding of the driver and its peripheral devices.

Wiring


A Warning

- The driver will be damaged if a commercial power supply (100/200 V) is added to the driver's servo motor power (U, V, and W). Be sure to check wiring for mistakes when the power supply is turned on.
- Connect the ends of the U, V, and W wires of the motor cable correctly to the phases (U, V, and W) of the servo motor power. If these wires do not match up, the servo motor cannot be controlled.

Grounding

⚠ Warning

 For grounding the actuator, connect the copper wire of the actuator to the driver's protective earth (PE) terminal and connect the copper wire of the driver to the earth via the control panel's protective earth (PE) terminal.
 Do not connect them directly to the control panel's protective earth (PE) terminal.

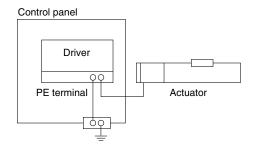

2. In the unlikely event that a malfunction is caused by the ground, please disconnect it.

Maintenance

⚠ Warning

- Perform a maintenance and inspection periodically. Confirm wiring and screws are not loose. Loose screws or wires may cause unintentional malfunction.
- 2. Conduct an appropriate functional inspection after completing the maintenance and inspection.

At times where the equipment or machinery does not operate properly, conduct an emergency stop of the system. Otherwise, an unexpected malfunction may occur and it will become impossible to ensure safety. Conduct a test of the emergency stop in order to confirm the safety of the equipment.

- 3. Do not disassemble, modify, or repair the driver and its peripheral devices.
- Do not put anything conductive or flammable inside the driver.

It may cause a fire.

- Do not conduct an insulation resistance test or withstand voltage test on this product.
- Ensure sufficient space for maintenance activities.
 Design the system allowing the required space for maintenance and inspection.

